ORDER NO. MD9002007C2

Service Manual

Stereo Music System

QUARTZ Synthesizer MW/LW/FM Stereo Radio with Double Cassette Tape Deck and Record Player

SA-HM35L

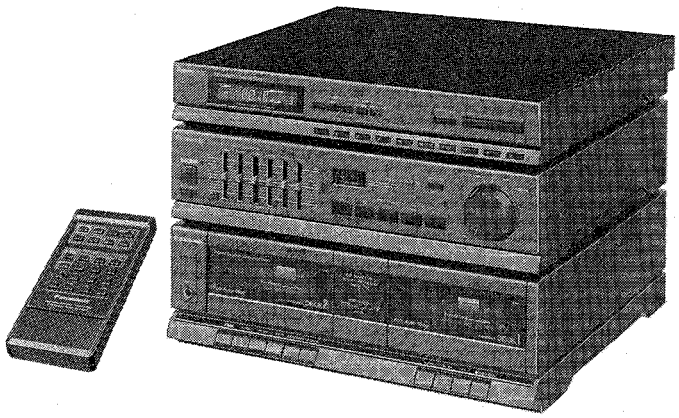

SJD2125-1 MECHANISM SERIES

Color

(K)... Black Type

Area

Country Code	Area	Color
(E)	Continental Europe.	(K)
(EB)	Great Britain.	(K)
(GN)	Oceania.	(K)

System name	Unit
SG-HM35L	SA-HM35L: Music Center
	SL-HM50B: Player
	SB-ZM35 (E, EB): Speaker SB-ZT19 (GN): Speaker (Made in PAES)

SPECIFICATIONS

■ AMPLIFIER SECTION

MPO	2×25 W (THD 10%, 4 Ω)
PMPO	2×50 W (THD 10%, 4 Ω) (EB, GN)
Input sensitivity and impedance	
PHONO	150 mV/15 kΩ
CD	250 mV/18 kΩ
AUX	150 mV/12 kΩ
Graphic equalizer frequency	
100 Hz, 330 Hz, 1 kHz, 3.3 kHz, 10 kHz, ±10 dB	
Load impedance	4 Ω~16 Ω
Loudness control (volume at −30 dB)	100 Hz, +10 dB

■ FM TUNER SECTION

Frequency range		87.50~108.00 MHz (0.05 MHz steps)
Sensitivity		25.2 dBf, (5 µV, IHF'58)
S/N 26 dB		3.8 µV (40 kHz mod., 75 Ω)
Total harmonic distortion		
1 kHz	**MONO**	0.3%
	STEREO	0.5%
S/N		
MONO		60 dB (65 dB, IHF)
Image rejection at 98 MHz		35 dB
Stereo separation		
1 kHz		35 dB
Antenna terminals		75 Ω (unbalanced)

■ AM TUNER SECTION

Frequency range	
MW	522~1611 kHz (9 kHz steps)
	530~1620 kHz (10 kHz stepe)
LW	155~353 kHz (9 kHz steps)
	153~351 kHz (−2 kHz shift)
Sensitivity (for 50 mW)	
MW	200 µV/m (999 kHz)
LW	500 µV/m (254 kHz)

■ CASSETTE DECK SECTION

Deck system		Full auto stop double cassette system
Track system		4-track, 2-channel
Heads		
(tape deck 1)	**Play**	Solid permalloy head
(tape deck 2)	**Rec/play**	Solid permalloy head
	Erasing	Double-gap ferrite head
Motors		DC servo motor
Recording system		AC bias
Erasing system		AC erase
Tape speed		4.8 cm/sec. (1-7/8 ips)
Frequency response		
NORMAL		50 Hz~12 kHz (DIN)
S/N		50 dB (A-WTD)
Wow and flutter		0.15% (WRMS)

■ GENERAL

Power consumption	77 W
Power supply	
For continental Europe	AC 50/60 Hz, 220 V
For Great Britain and Oceania	AC 50/60 Hz, 240 V
Dimensions (W×H×D)	360×276×370 mm (14-3/16" ×10-14/16" ×14-9/16")
Weight	4.7 kg (10.3 lb.)

Note:
Specifications are subject to change without notice.
Weight and dimensions are approximate.

Panasonic

Matsushita Electric Industrial Co., Ltd.
Central P.O. Box 288, Osaka 530-91, Japan

CONTENTS

	Page
CONNECTIONS	2
REMOTE CONTROL OPERATION	3
ACCESSORIES	4
FRONT PANEL CONTROLS AND FUNCTIONS	4, 5
DISASSEMBLY INSTRUCTIONS	6~9
PROTECTION CIRCUITRY	9
BEFORE REPAIR AND ADJUSTMENT	9
MEASUREMENTS AND ADJUSTMENTS	10~12
FUNCTION OF IC TERMINAL	13
INTERNAL CONNECTION OF FL	14
BLOCK DIAGRAM	15~17
SCHEMATIC DIAGRAM	18~24
PRINTED CIRCUIT BOARDS	25~28
TERMINAL GUIDE OF IC'S, TRANSISTORS AND DIODES	29
REPLACEMENT PARTS LIST	30~34
EXPLODED VIEWS	35~38
RESISTORS & CAPACITORS	39~41
PACKING	42

CONNECTIONS

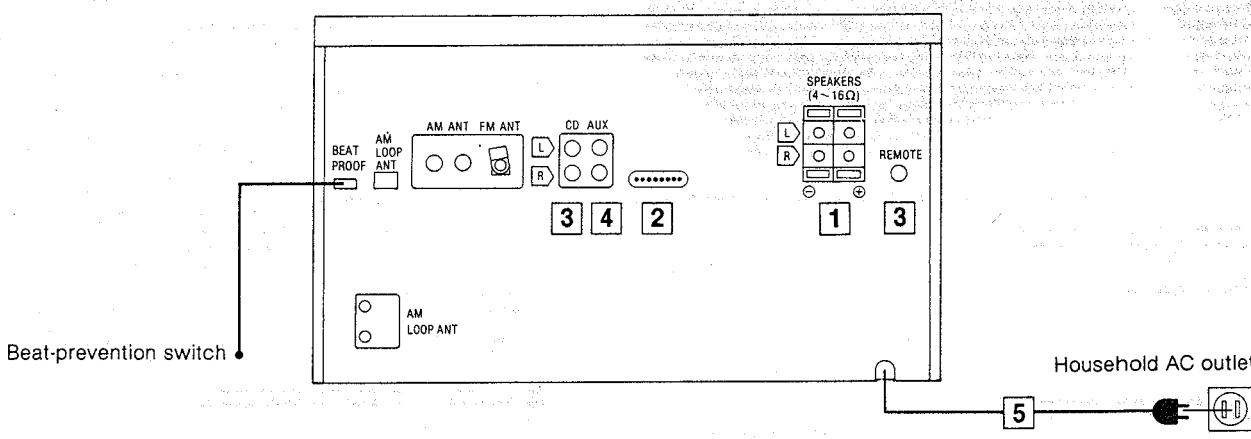

1 "SPEAKERS" terminals

The impedance of any speaker used with this unit must be 4 – 16 ohms.
Be sure to connect the striped cords to the negative terminals.

2 System player terminals

Connect the turntable (included with the system), which was especially designed for use with this system, to these terminals.

3 "CD" and "REMOTE" terminals

Connect a compact disc player.
Note:
The "REMOTE" terminal is for connection with the remote-control terminal of a compact-disc player manufactured by our company.
When this connection is made, operations can be controlled by using the remote-control transmitter of this unit.

4 "AUX" terminals

Connect a second tape deck (for playback only) etc.

5 AC power supply cord

Connect this cord only after all other cables have been connected.
Note:
Configuration of the AC outlet and AC power supply cord differ according to area.

■ REMOTE CONTROL OPERATION

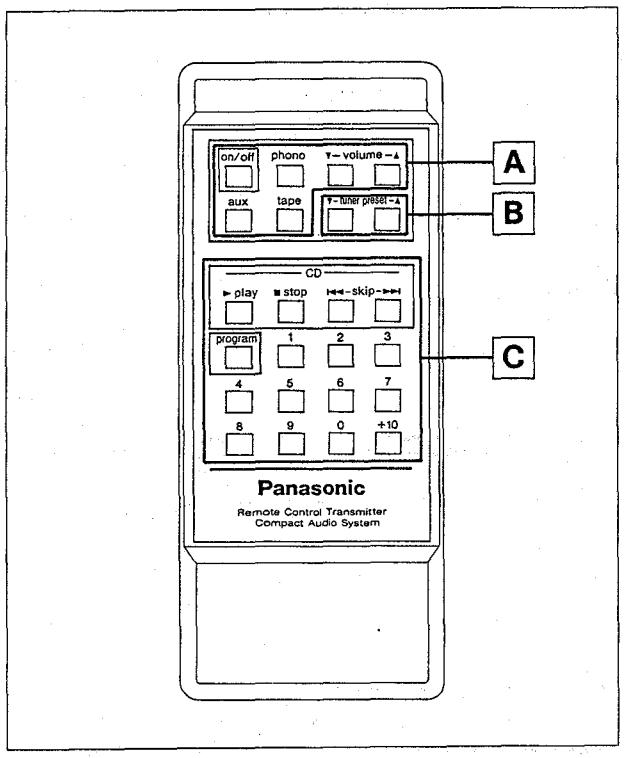

For detailed information concerning operation steps, etc., please refer to the appropriate page for each unit and the respective operation instructions. For this system, you can listen to tapes or compact discs, etc., by operating the remote-control transmitter without using the input selectors.

A Amplifier controls

on/off

Press this button to switch the unit ON or to the stand-by condition.
Note that there is no need to press this button if the unit's power is ON. (if it is pressed, the unit will be switched to the stand-by mode.)

▼-volume-▲

For adjustment of the volume level.
▲: To increase the volume level.
▼: To reduce the volume level.

phono, tape, aux

These buttons are used to select the program source (phono, tape, etc.)
phono: Press to listen to phono discs.
tape: Press to listen to tapes.
aux: Press to listen to sound from equipment connected to the "AUX" terminals of this unit.

B Tuner controls

▼-tuner preset-▲

To select a preset channel.
▲: Press to change to a higher channel.
▼: Press to change to a lower channel.
(If either button is pressed and held, the channel will change continuously.)

C Compact-disc controls

For a compact disc player manufactured by our company with a remote-control terminal. (Contact your dealer for details.)

► play

Press this button to start disc play.

■ stop

Press this button to stop disc play.
Note:
Depending upon the compact disc player used, presettings may be erased when this button is pressed.

⏮◀-skip-▶⏭

Press one of these buttons to select the desired track.
The search mode will be activated when this button is pressed and held.
⏮◀ : for a prior track
▶⏭ : for a track ahead
Note: The search function may not be usable with some types of compact-disc players.

program

Pressing this button initates the programmed play mode. You can then enter specific tracks using the numeric button (1–0, +10.)

1–0, +10

To select the track numbers.
- **When the track number is specified after pressing the program button,** the selected track number will be programmed. (To play the selected track, press the play/pause button.)
- The play begins automatically from the selected track **when a track is selected while the unit is in the stop mode.**

To select the specific track number

- **Tracks 1–9:** Press the appropriate numeric button 1–9 directly.
- **Tracks 10 and up:** First press +10, then 1–0. (Press +10 twice and 0 for 20, +10 three times and 0 for 30, and so on.)

■ ACCESSORIES

- Dust cover and hinges..... 1 and 2 (SYE1130) (SBH9383)
- AM loop antenna..... 1 (SPB1163)
- Remote-control transmitter..... 1 (EUR64874)
- Platter mat..... 1 (SJY4076)
- AM antenna holder..... 1 (SMA233-1)
- Batteries..... 1 (UM-3NEP-2P)
- FM indoor antenna..... 1 (SSA269)
- Screws..... 2 (XTB3+10J)
- 45-rpm adaptor..... 1 (SJY5018-1)

■ FRONT PANEL CONTROLS AND FUNCTIONS

The indication AM used here includes both MW and LW.

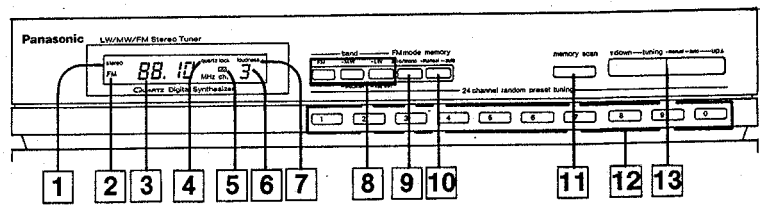

Tuner section

1 FM stereo indicator (stereo)

This indicator automatically illuminates when an FM stereo broadcast is being received.
It will not illuminate if the FM mode selector is set to the monaural mode.

2 Band indicator (FM, MW, LW)

This indicator indicates the band selected by using the band selector.

3 Digital frequency/input display

This display shows the sound source selected by pressing one of the input selectors. If the "tuner" input selector is pressed, there will be a change to the frequency after the source is indicated.

4 Quartz-lock indicator (quartz lock)

This indicator illuminates when the tuner is precisely tuned to a broadcast station.

5 Memory indicator (M)

This indicator illuminates when the memory button is pressed.

6 Channel display

This display shows the channel number selected by one of the preset-tuning buttons.

7 Loudness indicator (loudness)

This indicator illuminates when the loudness button is pressed.

8 Band selectors (band)

These selectors are used to select the band.
allocation: When the MW button is pressed for about 3 seconds, the MW frequency step will change to 10 kHz per step. (This unit is set to 9 kHz before shipment.) In order to return to the original frequency indication, press this button for about 3 seconds again.
freq shift: When the LW button is pressed for about 3 seconds during reception of an LW broadcast, the LW frequency will decrease by 2 kHz. In order to return to the original frequency indication, press this button for about 3 seconds again.

9 FM mode selector (FM mode)

This unit automatically switches to the stereo mode when an FM stereo broadcast is received. This selector is used to select the mode (stereo or monaural) of FM broadcast signals.

10 Memory button (memory)

This button can be used when presetting broadcast station frequencies to the memory.

11 Memory scan button (memory scan)

This button can be used to locate a desired broadcast station; each broadcast station is selected for about four seconds.

12 Preset-tuning buttons (1–0) (24 channel random preset tuning)

These buttons are used to preset broadcast frequencies into the memory of this unit, and are also pressed to recall the desired preset stations.

13 Tuning buttons (tuning)

These buttons are used for tuning to the desired broadcast station.

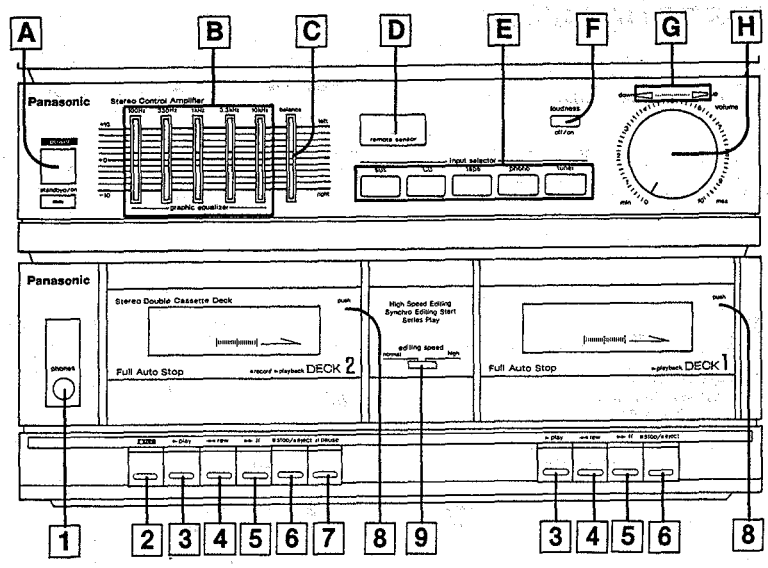

Amplifier section

A Power "standby ⏻ /on" switch (power "standby ⏻ /on")

This switch switches ON and OFF the secondary circuit power only. The unit is in the "standby" condition when this switch is set to the "standby ⏻ " position. Regardless of the switch setting, the primary circuit is always "live" as long as the power cord is connected to an electrical outlet.

B Equalizer controls (graphic equalizer)

These controls are for compensation of tonal quality. By sliding the controls at each of the indicated frequencies in the "+" direction, the tonal quality is increased, and by sliding them in the "−" direction, the tonal quality is decreased.

C Balance control (balance)

This control can be used to adjust the balance of sound heard from the left and right speaker systems.

D Remote-control signal receptor (remote sensor)

Receives the signals from the remote-control transmitter.

E Input selectors (input selector)

These selectors are used to select the sound source to be heard, such as a phono disc, radio broadcast, etc.

F Loudness button (loudness)

This button is used when listening to music at a low volume level. Auditory perception of sound in the low frequency range falls off at low volume, but when the switch is in this position, this deficiency is compensated for, so that the full impact of the musical performance can be enjoyed.

G Volume-level adjustment indicators

One of these indicators flashes continually to indicate when the sound volume level is being adjusted by using the volume controls on the remote-control transmitter.
up (▷): When increasing the volume level.
down (◁): When reducing the volume level.

H Volume control (volume)

Cassette deck section

1 Headphones jack (phones)

2 Record button (○ rec)

This button is used when making a recording (tape deck 2 only).

3 Playback button (▶ play)

4 Rewind button (◀◀ rew)

5 Fast-forward button (▶▶ ff)

6 Stop/eject button (■ stop/ ▲ eject)

This button is used to open the cassette holder, and to stop tape movement.

7 Pause button (▮▮ pause)

This button is used to temporarily stop the tape playback or recording of tape deck 2 only.

8 Cassette holder

9 Edit-recording tape-speed selector (editing speed)

This selector is used to select the recording speed when a tape-to-tape recording is made.

■ DISASSEMBLY INSTRUCTIONS

Ref. No. 1	Removal of the upper board
Procedure 1	1. Remove the 4 screws (❶~❹). 2. Remove the upper board in the direction of the arrow.

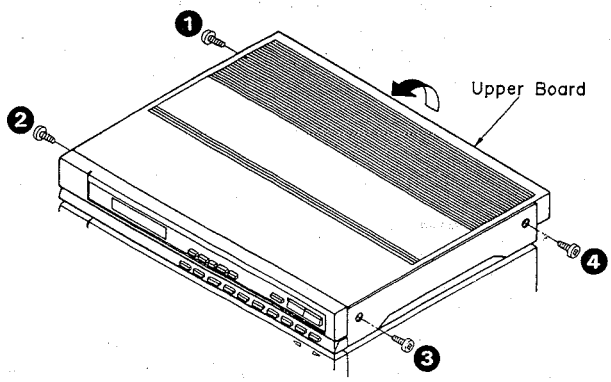

Ref. No. 3	Removal of the bottom board
Procedure 3	1. Remove the 4 screws (❶~❹). 2. Remove the bottom board in the direction of the arrow.

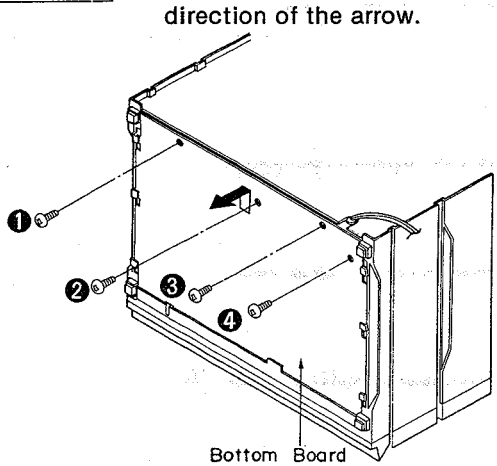

Ref. No. 5	Removal of the power IC and regulator transistor
Procedure 1→2→4→5	1. Remove the 4 screws (❶~❹). 2. Unsolder the power IC.

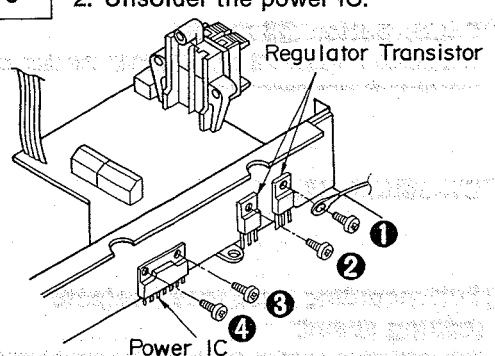

• **When mounting the power IC or regulator transistor.**
Apply silicone compound (SZZOL15) to the rear side of power IC or regulator transistor.

Ref. No. 2	Removal of the rear board
Procedure 1→2	1. Remove the 12 screws (❶~⓬). 2. Remove the rear board in the direction of the arrow.

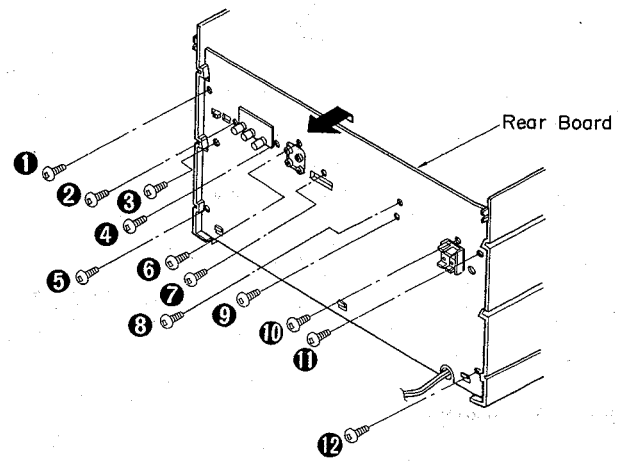

Ref. No. 4	Removal of the main P.C.B.
Procedure 1→2→4	1. Pull out the volume knob. 2. Remove the unit.

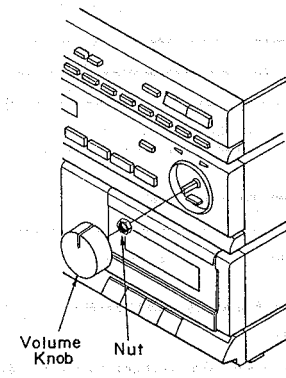

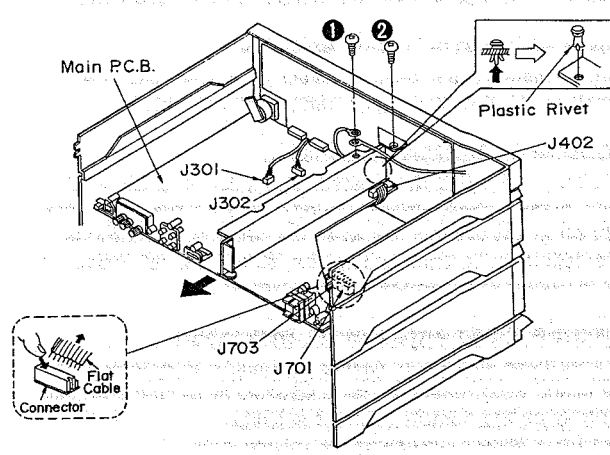

3. Pull out the 3 connectors (J301, J302, J402).
4. Remove the 2 flat cables (J701, J703).
5. Remove the 2 screws (❶, ❷).
6. Remove the plastic rivet.
7. Remove the main P.C.B. in the direction of the arrow.

Ref. No. 6	Removal of the headphones jack P.C.B.

Procedure 1→2→4→6

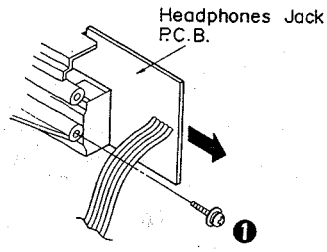

1. Remove the 1 screw (❶).
2. Remove the headphones jack P.C.B. in the direction of the arrow.

Ref. No. 7	Removal of the power transformer and power supply P.C.B.

Procedure 1→2→4→7

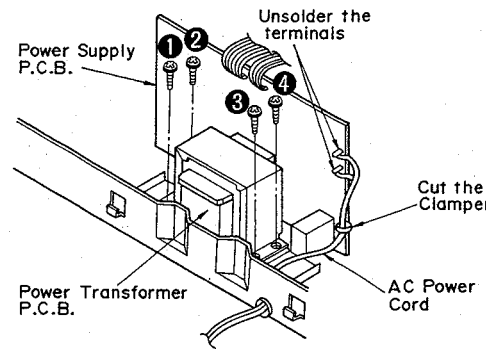

1. Remove the 4 screws (❶~❹).
2. Unsolder the terminals of the AC power cord.

Ref. No. 8	Removal of the rear angle and transformer angle

Procedure 7→8

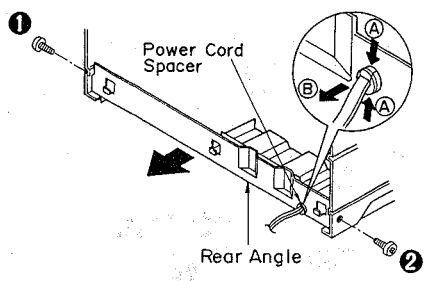

1. Remove the 2 screws (❶, ❷).
2. Remove the rear angle in the direction of the arrow.
3. Remove the power cord spacer.

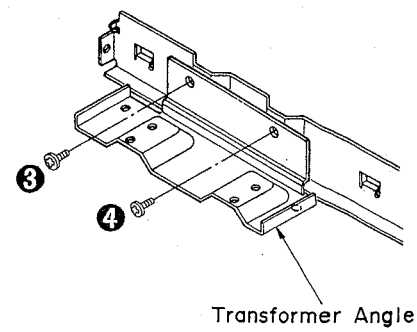

4. Remove the 2 screws (❸, ❹).

Ref. No. 9	Removal of the side board (L) • (R)

Procedure 6→7→8→9

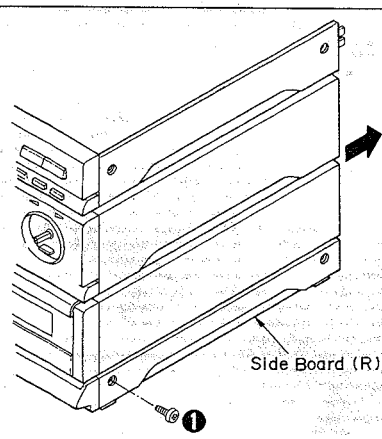

1. Remove the 1 screw (❶).
2. Remove the side board (R) in the direction of the arrow.

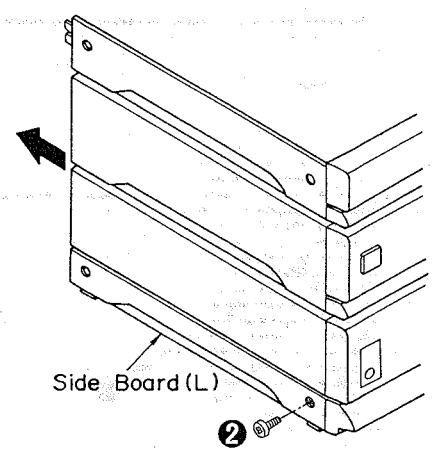

3. Remove the 1 screw (❷).
4. Remove the side board (L) in the direction of the arrow.

Ref. No. 10	Removal of the operation P.C.B.
Procedure 9→10	

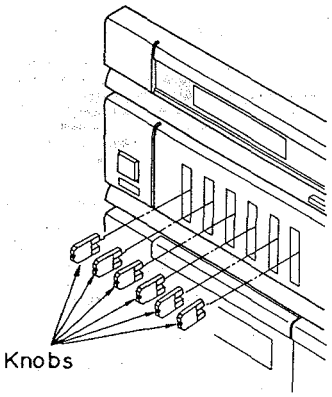

1. Pull out the 6 knobs.

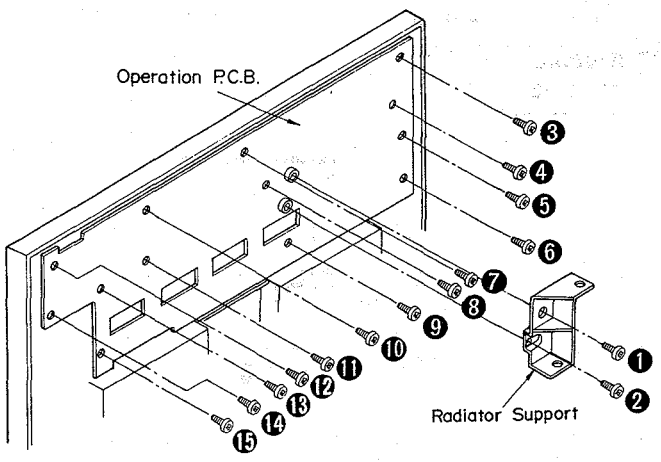

2. Remove the 2 screws (❶, ❷).
3. Remove the radiator support.
4. Remove the 13 screws (❸~⓯).

Ref. No. 11	Removal of the cassette tape deck (DECK 1, DECK 2)
Procedure 9→11	

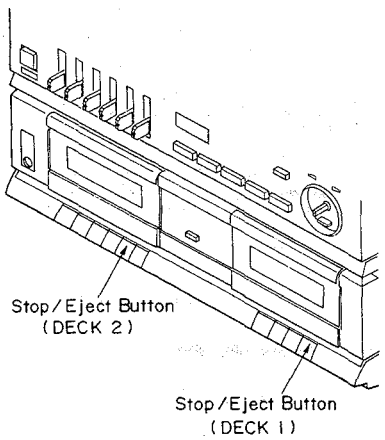

1. Push the stop/eject button.

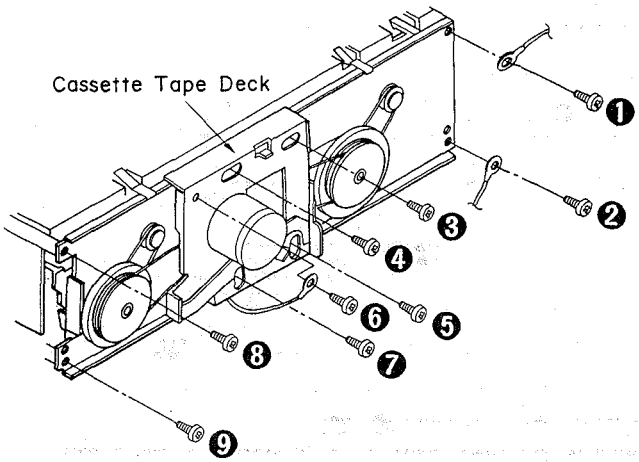

2. Remove the 9 screws (❶~❾).

Ref. No. 12	Removal of the editing speed P.C.B.
Procedure 9→11→12	

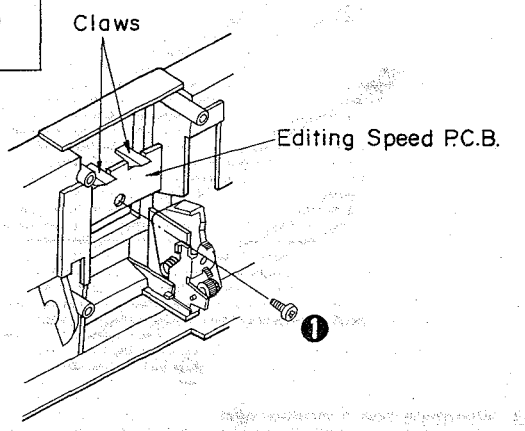

1. Remove the 1 screw (❶).
2. Release the 2 claws.

Ref. No. 13	Removal of the damper gear (DECK 1, DECK 2)
Procedure 9→11→13	

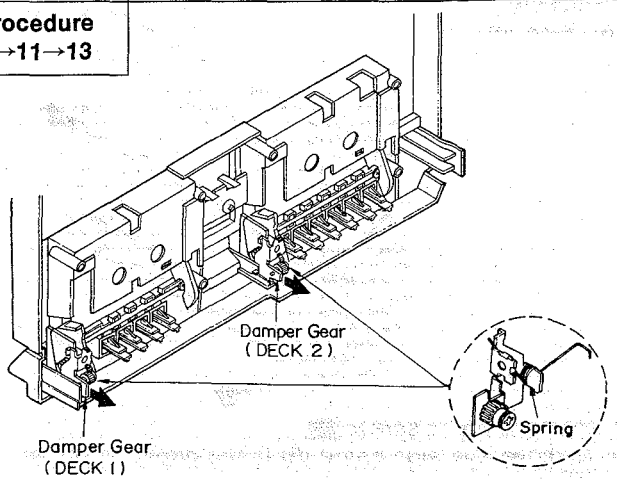

• Pull out the damper gear in the direction of the arrow.

Ref. No. 14	Removal of the cassette holder (DECK 1, DECK 2)
Procedure 9→11→13→14	

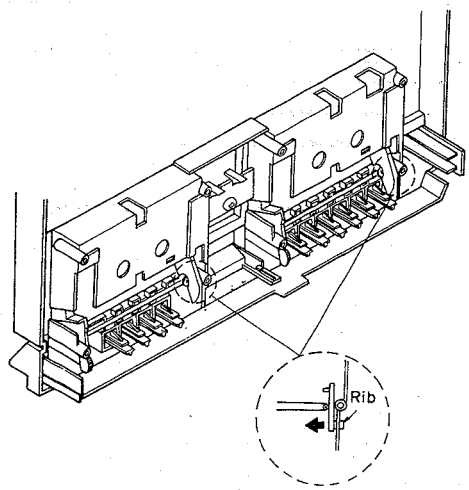

1. Remove the rib in the direction of the arrow.

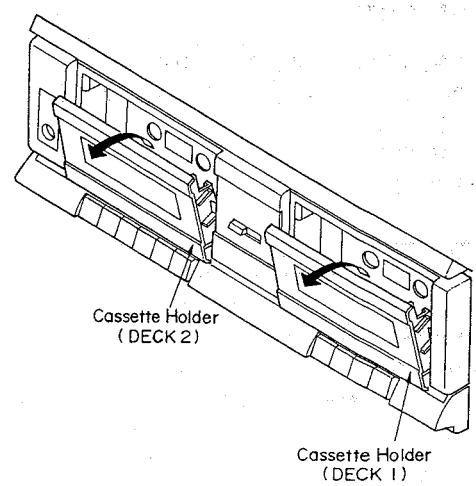

2. Pull out the cassette holder in the direction of the arrow.

Ref. No. 15	Removal of the operation buttons (DECK 1, DECK 2)
Procedure 14→15	

1. Remove the 4 screws (❶~❹).
2. Remove the shaft.
3. Remove the operation buttons.

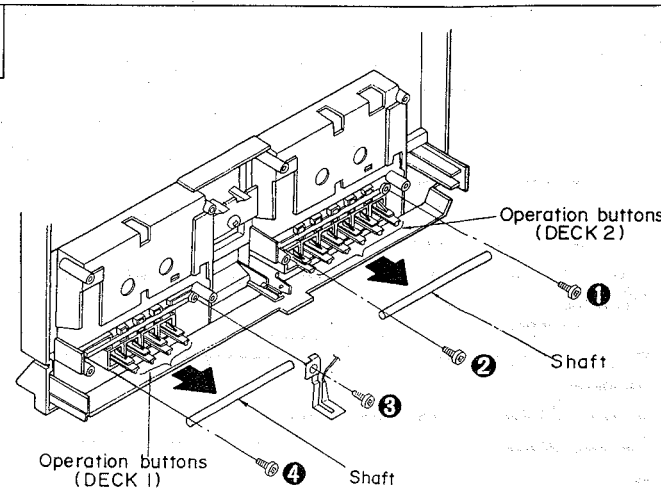

■ PROTECTION CIRCUITRY

The protection circuitry may have operated if either of the following condition is noticed:
- No sound is heard when the power is turned on.
- Sound stops during a performance.

The function of this circuitry is to prevent circuitry damage if, for example, the positive and negative speaker connection wires are "shorted", or if speaker systems with an impedance less than the indicated rated impedance of the amplifier are used.

If this occurs, follow the procedure outlined below.
1. Turn off the power.
2. Determine the cause of the problem and correct it.
3. Turn on the power once again.

Note:
When the protection circuitry functions, the unit will not operated unless the power is first turned off and then on again.

■ BEFORE REPAIR AND ADJUSTMENT

Disconnect AC power, Discharge Power Supply Capacitors C712 through a 10Ω, 5W resistor to ground.
DO NOT SHORT-CIRCUIT DIRECTLY (with a screwdriver blade, for instance), as this may destroy solid state devices.
After repairs are completed, restore power gradually using a variac, to avoid overcurrent.
Current consumption at 50Hz/60Hz in NO SIGNAL mode should be shown below with respect to supply 220V/240V.

Power supply voltage	AC 220V	AC 240V	
Consumed current 50Hz/60Hz	20~60mA	stand by	20~60mA
		power on	50~110mA

■ MEASUREMENTS AND ADJUSTMENTS

• MW/LW/FM section

Control positions and equipment used

- AM and FM signal generator (AM and FM-SG)
- Stereo modulator
- Distortion analyser
- Oscilloscope
- AF Oscillator
- AC and DC electronic voltmeter (EVM)
- Digital frequency counter
- Choke coil (100μH)
- Resistor (330kΩ, 1kΩ, 1MΩ)

Note: For **T201** (MW-IFT), **L203** (MW OSC coil), and **L210** (LW OSC coil) they are supplied as adjusted parts. So, do not turn the cores of the parts.

MW-RF ADJUSTMENT

1. Test equipment connection is shown in figure.
2. Set the unit to **"MW"** position.
3. Place the radio dial and signal generator setting to **612kHz.**
4. Adjust **L202** for maximum output.
5. Place the radio dial and signal generator setting to **1503kHz.**
6. Adjust **CT201** for maximum output.
7. Repeat steps 3~6.

Note:
Antenna input level must be as low as possible being free from AGC.

AM SIGNAL GENERATOR CONDITION
Modulation.....30%
Modulation frequency.....400Hz

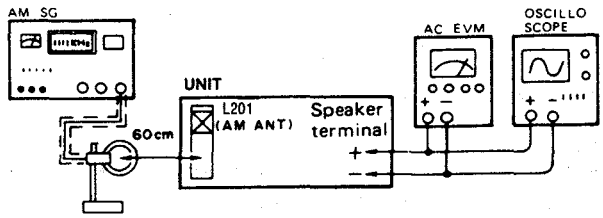

LW-RF ADJUSTMENT

1. Test equipment connection is shown in figure.
2. Set the unit to **"LW"** position.
3. Place the radio dial and signal generator setting to **155kHz.**
4. Adjust **L209** for maximum output.
5. Place the radio dial and signal generator setting to **353kHz.**
6. Adjust **CT202** for maximum output.
7. Repeat steps 3~6.

Note:
Antenna input level must be as low as possible being free from AGC.

AM SIGNAL GENERATOR CONDITION
Modulation.....30%
Modulation frequency.....400Hz

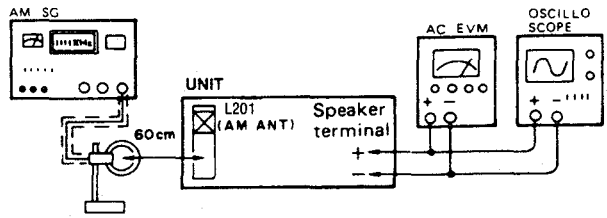

FM MONO DISTORTION ADJUSTMENT

1. Test equipment connection is shown in figure.
2. Set the unit to **"FM"** position.
3. Place the radio frequency display and signal generator setting to **100.10MHz.**
4. Adjust **T202** core so that voltage measured in signal mode is **0mV** (0±30mV) in 300mV range.
5. Adjust **T203** so that the distortion factor of Lch is minimized.
6. Repeat steps 4 and 5.
7. Make sure that the distortion factors of Lch and Rch are nearly the same with each other to minimum.

Note:
The adjusting screwdriver used should be made of resin.

FM SIGNAL GENERATOR CONDITION
Modulation.....100%
Modulation frequency.....1kHz
Output level.....66dB

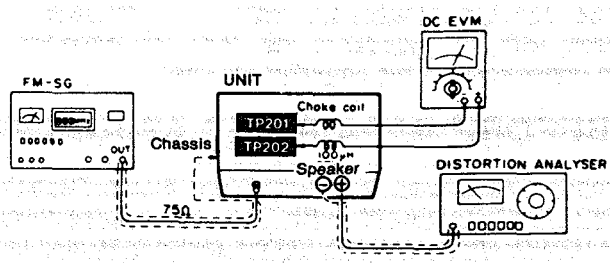

MPX VCO ADJUSTMENT

1. Test equipment connection is shown in figure.
2. Set the unit to "**auto**" position.
3. Place the radio dial and signal generator setting to **100.10 MHz.**
4. Adjust **VR201** for **38 kHz ± 0.05 kHz** on frequency counter reading.

★USING ALTERNATE SYSTEM

1. Apply stereo signal from generator or receive the stereo broadcast.
2. Adjust **VR201** until stereo indicator lights up. Cement arm of **VR201** as shown in figure.

FM SIGNAL GENERATOR CONDITION
Modulation.....0% (non-modulation)
Output level.....66dB

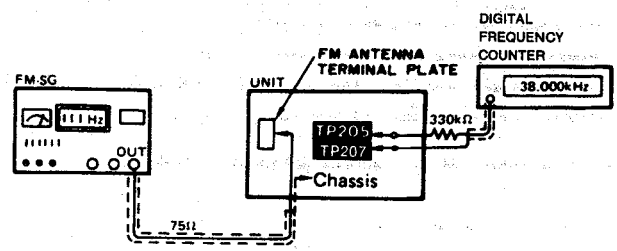

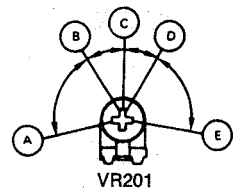

Ⓐ – Ⓑ Ⓓ – Ⓔ : Stereo OFF position
Ⓑ – Ⓓ : Stereo ON position (indicator lighting)
Ⓒ : Adjust point of Pilot circuit

• CASSETTE DECK section

MEASUREMENT CONDITION:
- Make sure heads are clean
- Make sure capstan and pressure roller are clean

TEST TAPE:
- Head azimuth adjustment (8 kHz, −20 dB): QZZCFM
- Tape speed adjustment (3 kHz, −10 dB): QZZCWAT
- Normal reference blank: QZZCRA

HEAD AZIMUTH ADJUSTMENT (DECK 1, 2)

1. Test equipment connection is shown in figure.
2. Playback the azimuth adjusted part (8 kHz, −20 dB) of the test tape (QZZCFM) and regulate the angle adjusting screw so that the outputs of L-CH and R-CH are maximized. (When the adjusting positions are different with L-CH and R-CH, find a position where the outputs of L-CH and R-CH are balanced, and then make the adjustment.)
3. At the same time, draw a lissajous waveform and eliminate phase deflection.
4. After the adjustment, apply screw-lock to the angle adjusting value.

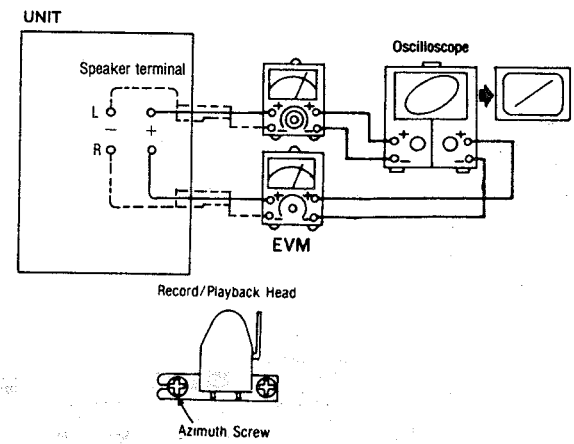

TAPE SPEED ADJUSTMENT (DECK 1, 2)

1. Test equipment connection is shown in figure.
2. Set the unit to "**TAPE**" position.
3. Playback the middle part of the test tape (QZZCWAT).
4. Adjust **VR401** so that the output is within the standard value. (DECK 1, 2)

Note:
The Normal speed adjustment must be done before the High speed adjustment.

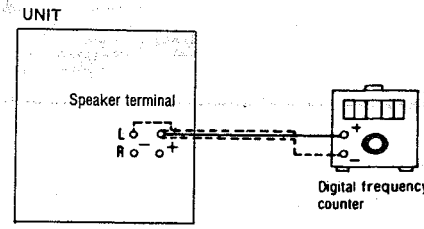

DECK 1 Standard value: 2980~3020 Hz (Normal)
DECK 2 Standard value: 2955~3045 Hz (Normal)

Standard value: 5340~5910 Hz (High)

BIAS OSC FREQUENCY ADJUSTMENT (DECK 2)

1. Test equipment connection is shown in figure.
2. Set the unit to "**TAPE**" position.
3. Place cassette deck into **REC** mode.
4. Adjust **L401** for **74~83kHz** (BEAT PROOF: A) [**78~89kHz** (BEAT PROOF: B)] on frequency counter reading.

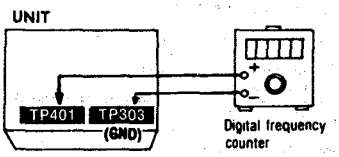

RECORDING BIAS ADJUSTMENT (DECK 2)

1. Test equipment connection is shown in figure.
2. Insert the normal tape.
3. Place cassette deck into **REC** mode.
4. Adjust **VR305** so that the output between **TP301** (L-CH) {**TP302** (R-CH)} and **TP303** (GND) is within the standard value.

DECK 2 Standard value: 10~14.5mV

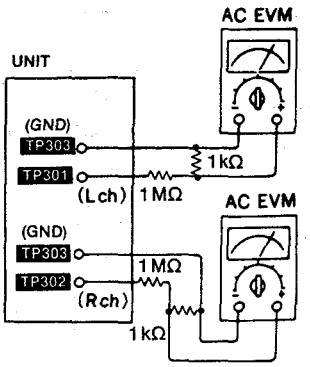

•Adjustment points

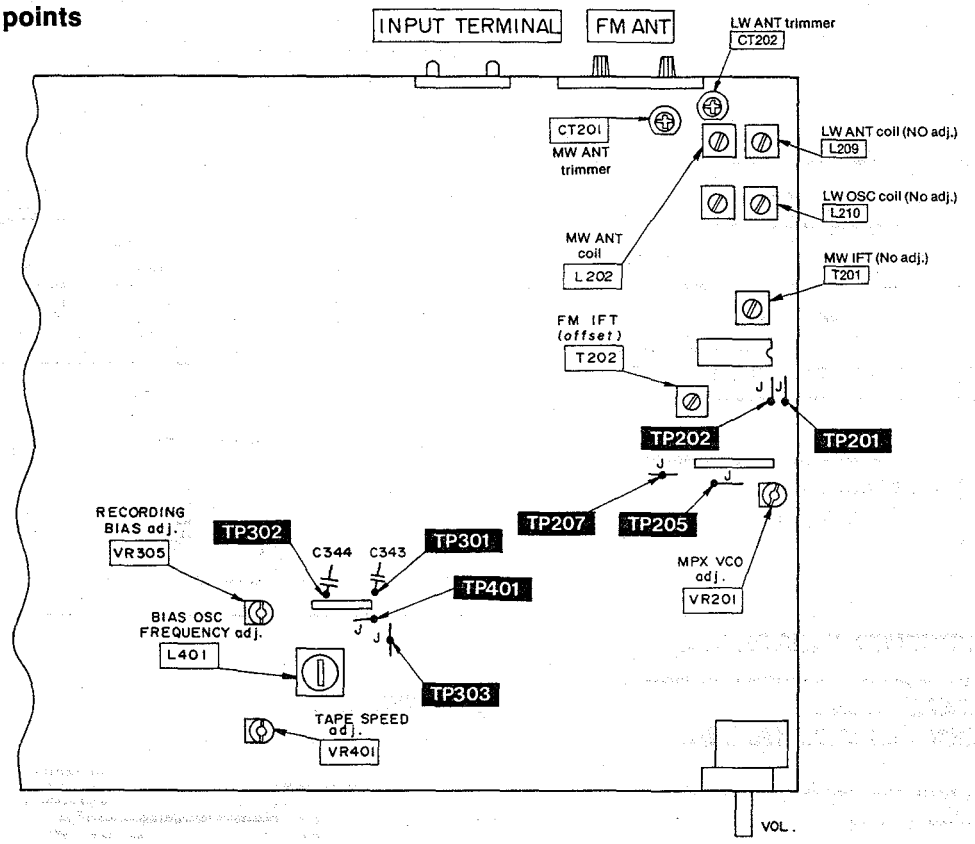

■ FUNCTION OF IC TERMINAL

• IC901 (LC6554H-4082): Microcomputer

PIN NO.	MARK	I/O	DESCRIPTION OF TERMINAL
1	PP0	O	Segment signal output for FL display
2 ⟆ 5 • 6 • 7	PA0 ⟆ PA3 • PB0 PB1	I	Input terminal for key return signal from external key matrix
8	PB2 (P. ON/OFF)	I	Power SW detection terminal
9	PB3 (STANDBY)	I	Power supply detection terminal
10	PC0	—	Not used, connected to power supply
11	PC1 (STEREO)	I	Stereo signal input
12	PC2 (SD)	I	Signal received detection terminal
13	PC3 (DPLY)	—	Not used, connected to GND
14	PD0 (RELAY)	O	Relay control signal output
15	PD1 (DK)	—	Not used, connected to GND
16	PD2 (P. ST)	—	
17	PD3 (P. STP)	—	
18	PE0 (BEEP)	—	
19	PE1 (TU. MU)	O	Muting control signal output for tuner circuit
20	PE2 (ATT)	—	Not used, connected to GND
21	PE3 (A. MU)	O	Muting control signal output for amplifier circuit
22	TEST	—	Test terminal (Not used, connected to GND)
23	VSS	—	Ground terminal
24	OSC1	I	Oscillator terminal
25	OSC2	O	
26	$\overline{\text{RES}}$	I	Reset signal input
27	PF0 (DATA)	O	Serial data output terminal
28	PF1 (CL)	O	Clock signal terminal for signal data

PIN NO.	MARK	I/O	DESCRIPTION OF TERMINAL
29	PF2 (CE)	O	Chip enable terminal
30	PF3 ($\overline{\text{INT}}$)	I	Remote control signal input
31	PG0 (MONO)	O	Forcible monaural select signal output
32	PG1 (HOUSE)	—	Not used, connected to GND
33	PG2 (ST)	O	Level shift control signal output
34	PG3 (DUB)	O	Tape speed control signal output
35	P10 (V. DOWN)	O	LED drive signal output
36	P11 (V. UP)		
37	P12 (SURR)	—	Not used, connected to GND
38	P13 (LOUD)	O	Loudness control signal output
39	PJ0 (V.M.D)	O	Volume motor control UP/DOWN signal output
40	PJ1 (V.M.U)		
41	PJ2	—	Not used, connected to GND
42	PJ3 (NOUSE)	—	Not used, connected to GND
43	VP	I	Power supply terminal (negative voltage)
44 ⟆ 47	PK0 ⟆ PK3	O	Segment signal output for FL display
48 ⟆ 51	PL0 ⟆ PL3	O	Segment signal output for FL display
52 ⟆ 55	PM0 ⟆ PM3	O	Segment signal output for FL display
56	VDD	I	Power supply terminal (positive voltage)
57 ⟆ 60	PN0 ⟆ PN3	O	Key scan signal and digit signal for FL display
61 ⟆ 64	PO0 ⟆ PO3	O	Key scan signal and digit signal for FL display

■ INTERNAL CONNECTION OF FL

• Grid connection diagram

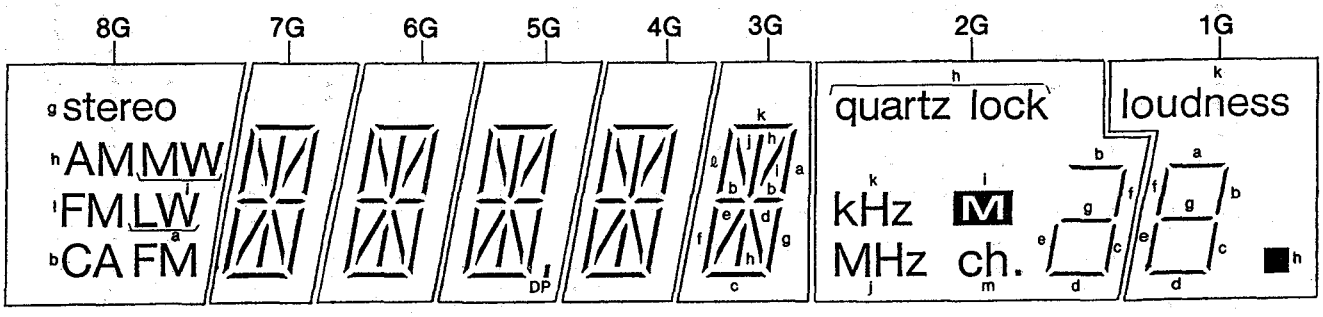

• Pin connection table

PIN NO.	35	34	33	32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
CONNECTION	NP	F2	NP	NP	d	c	e	g	f	b	a	ℓ	i	h	j	k	NP	NP	NP	NP	NP	NP	2G	1G	8G	7G	6G	5G	4G	3G	m	NP	NP	F1	NP

• Anode connection table

	8G	7G	6G	5G	4G	3G	2G	1G
a	LW	a	a	a	a	a	-	a
b	CAFM	b	b	b	b	b	b	b
c	-	c	c	c	c	c	c	c
d	-	d	d	d	d	d	d	d
e	-	e	e	e	e	e	e	e
f	-	f	f	f	f	f	f	f
g	stereo	g	g	g	g	g	g	g
h	AM	h	h	h	h	h	quartz lock	■
i	MW	i	i	i	i	i	M	-
j	-	j	j	j	j	j	MHz	-
k	-	k	k	k	k	k	kHz	loudness
ℓ	FM	ℓ	ℓ	ℓ	ℓ	ℓ	-	-
m	-	-	-	DP	-	-	ch.	-

■ BLOCK DIAGRAM

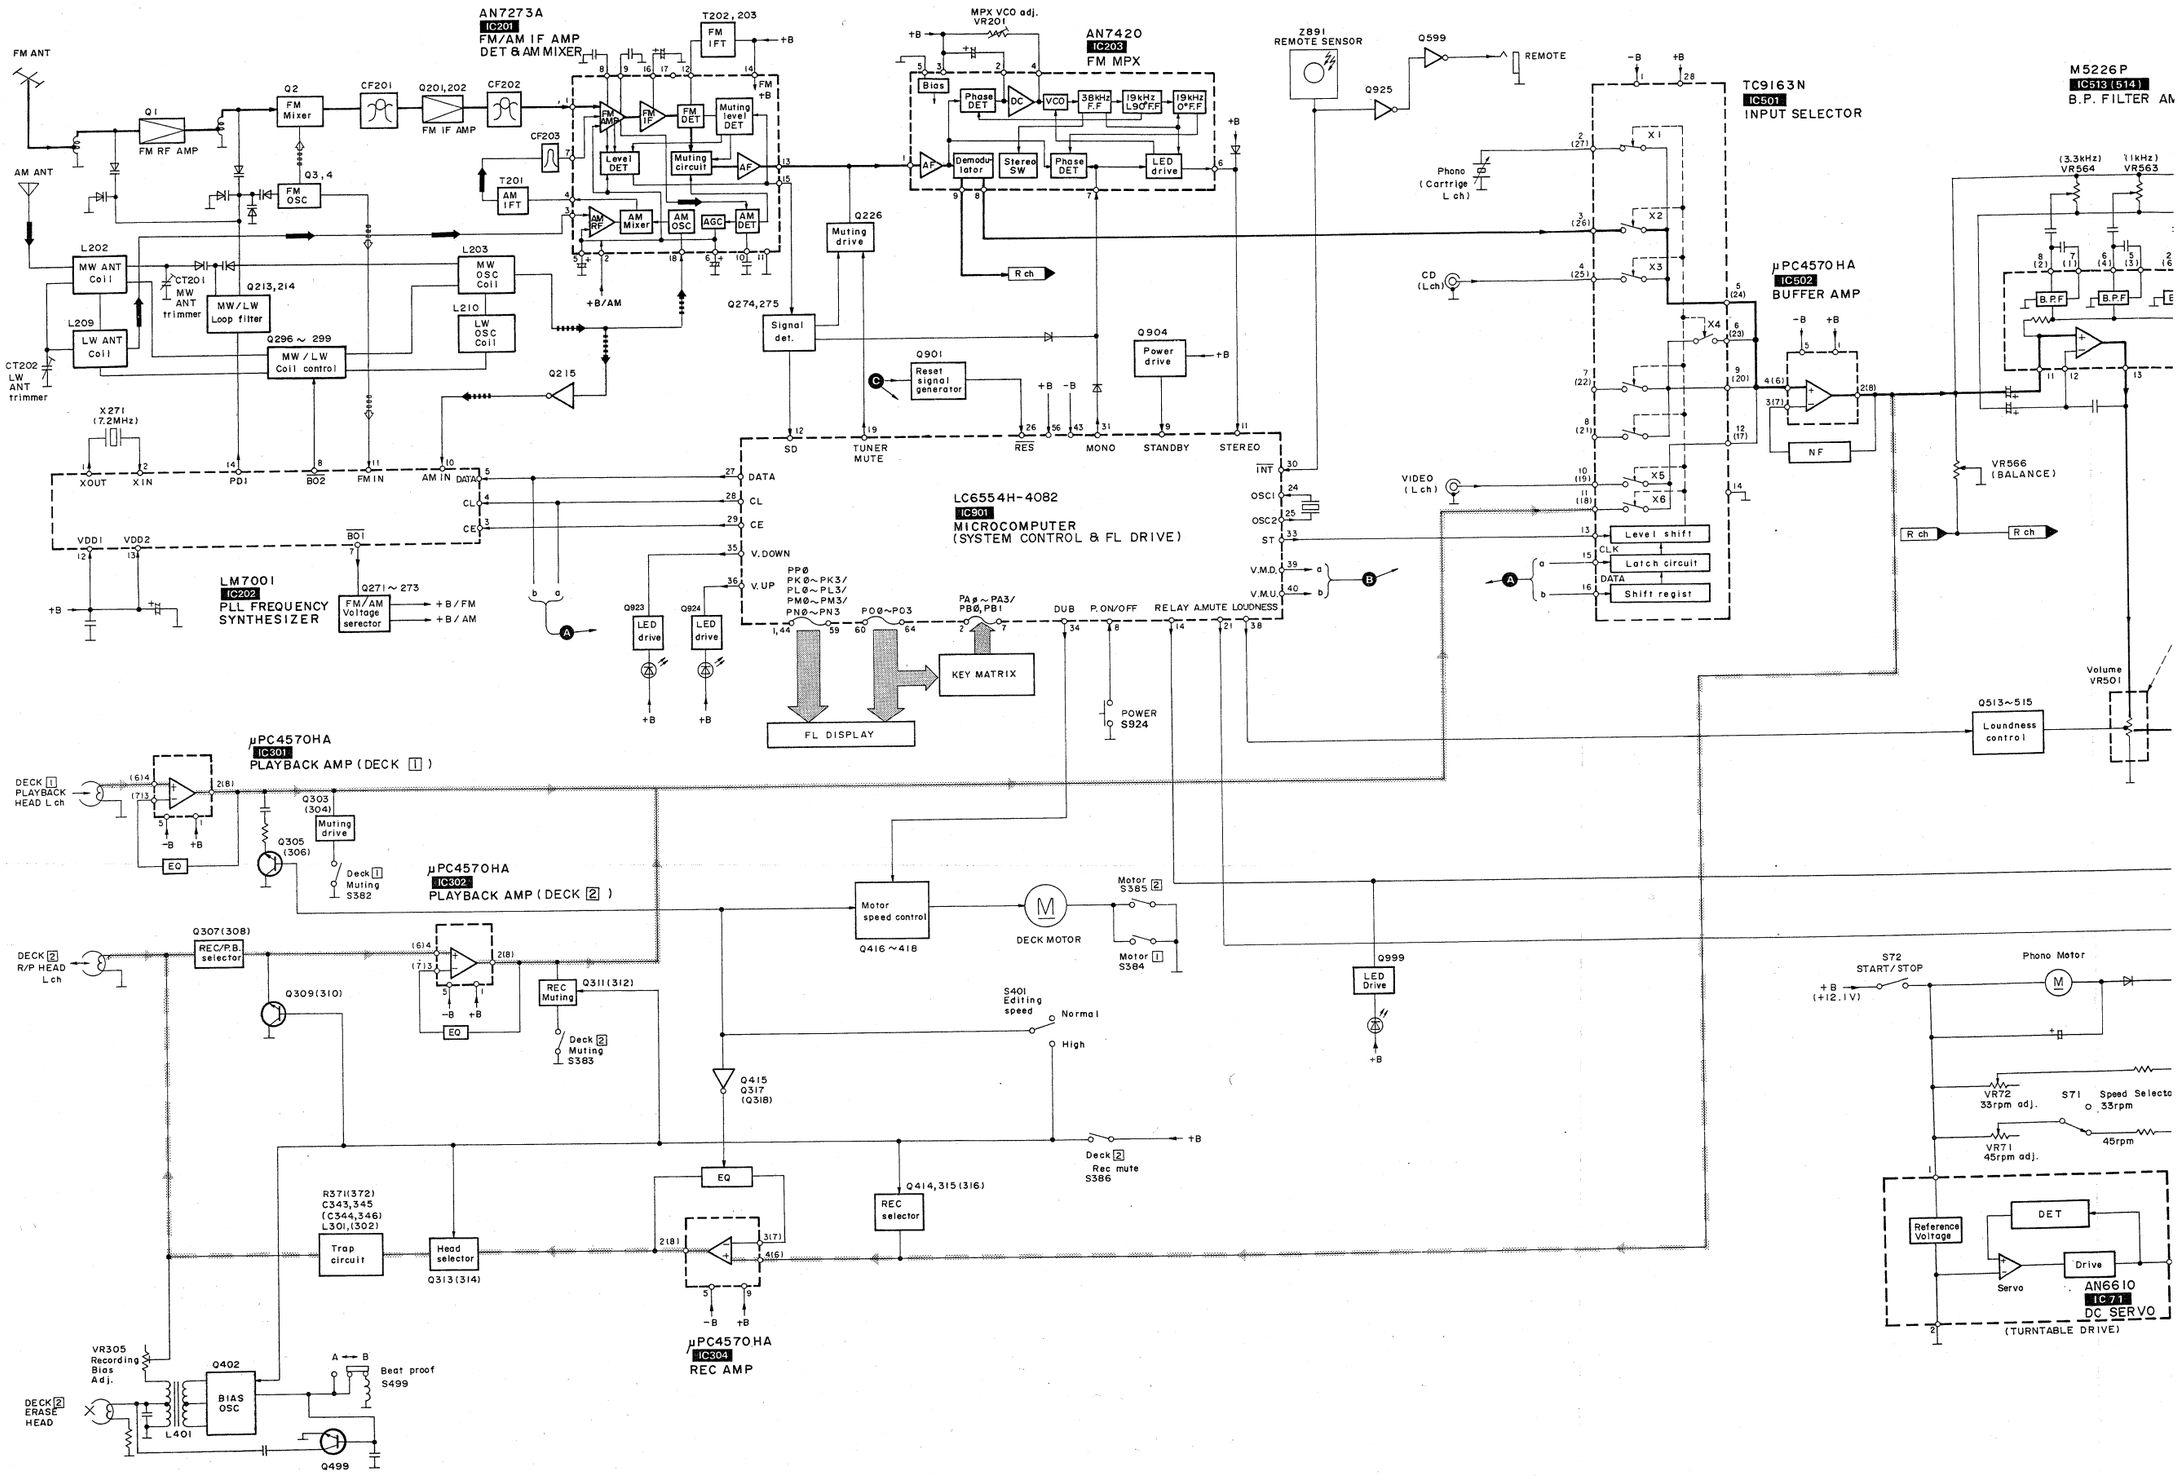

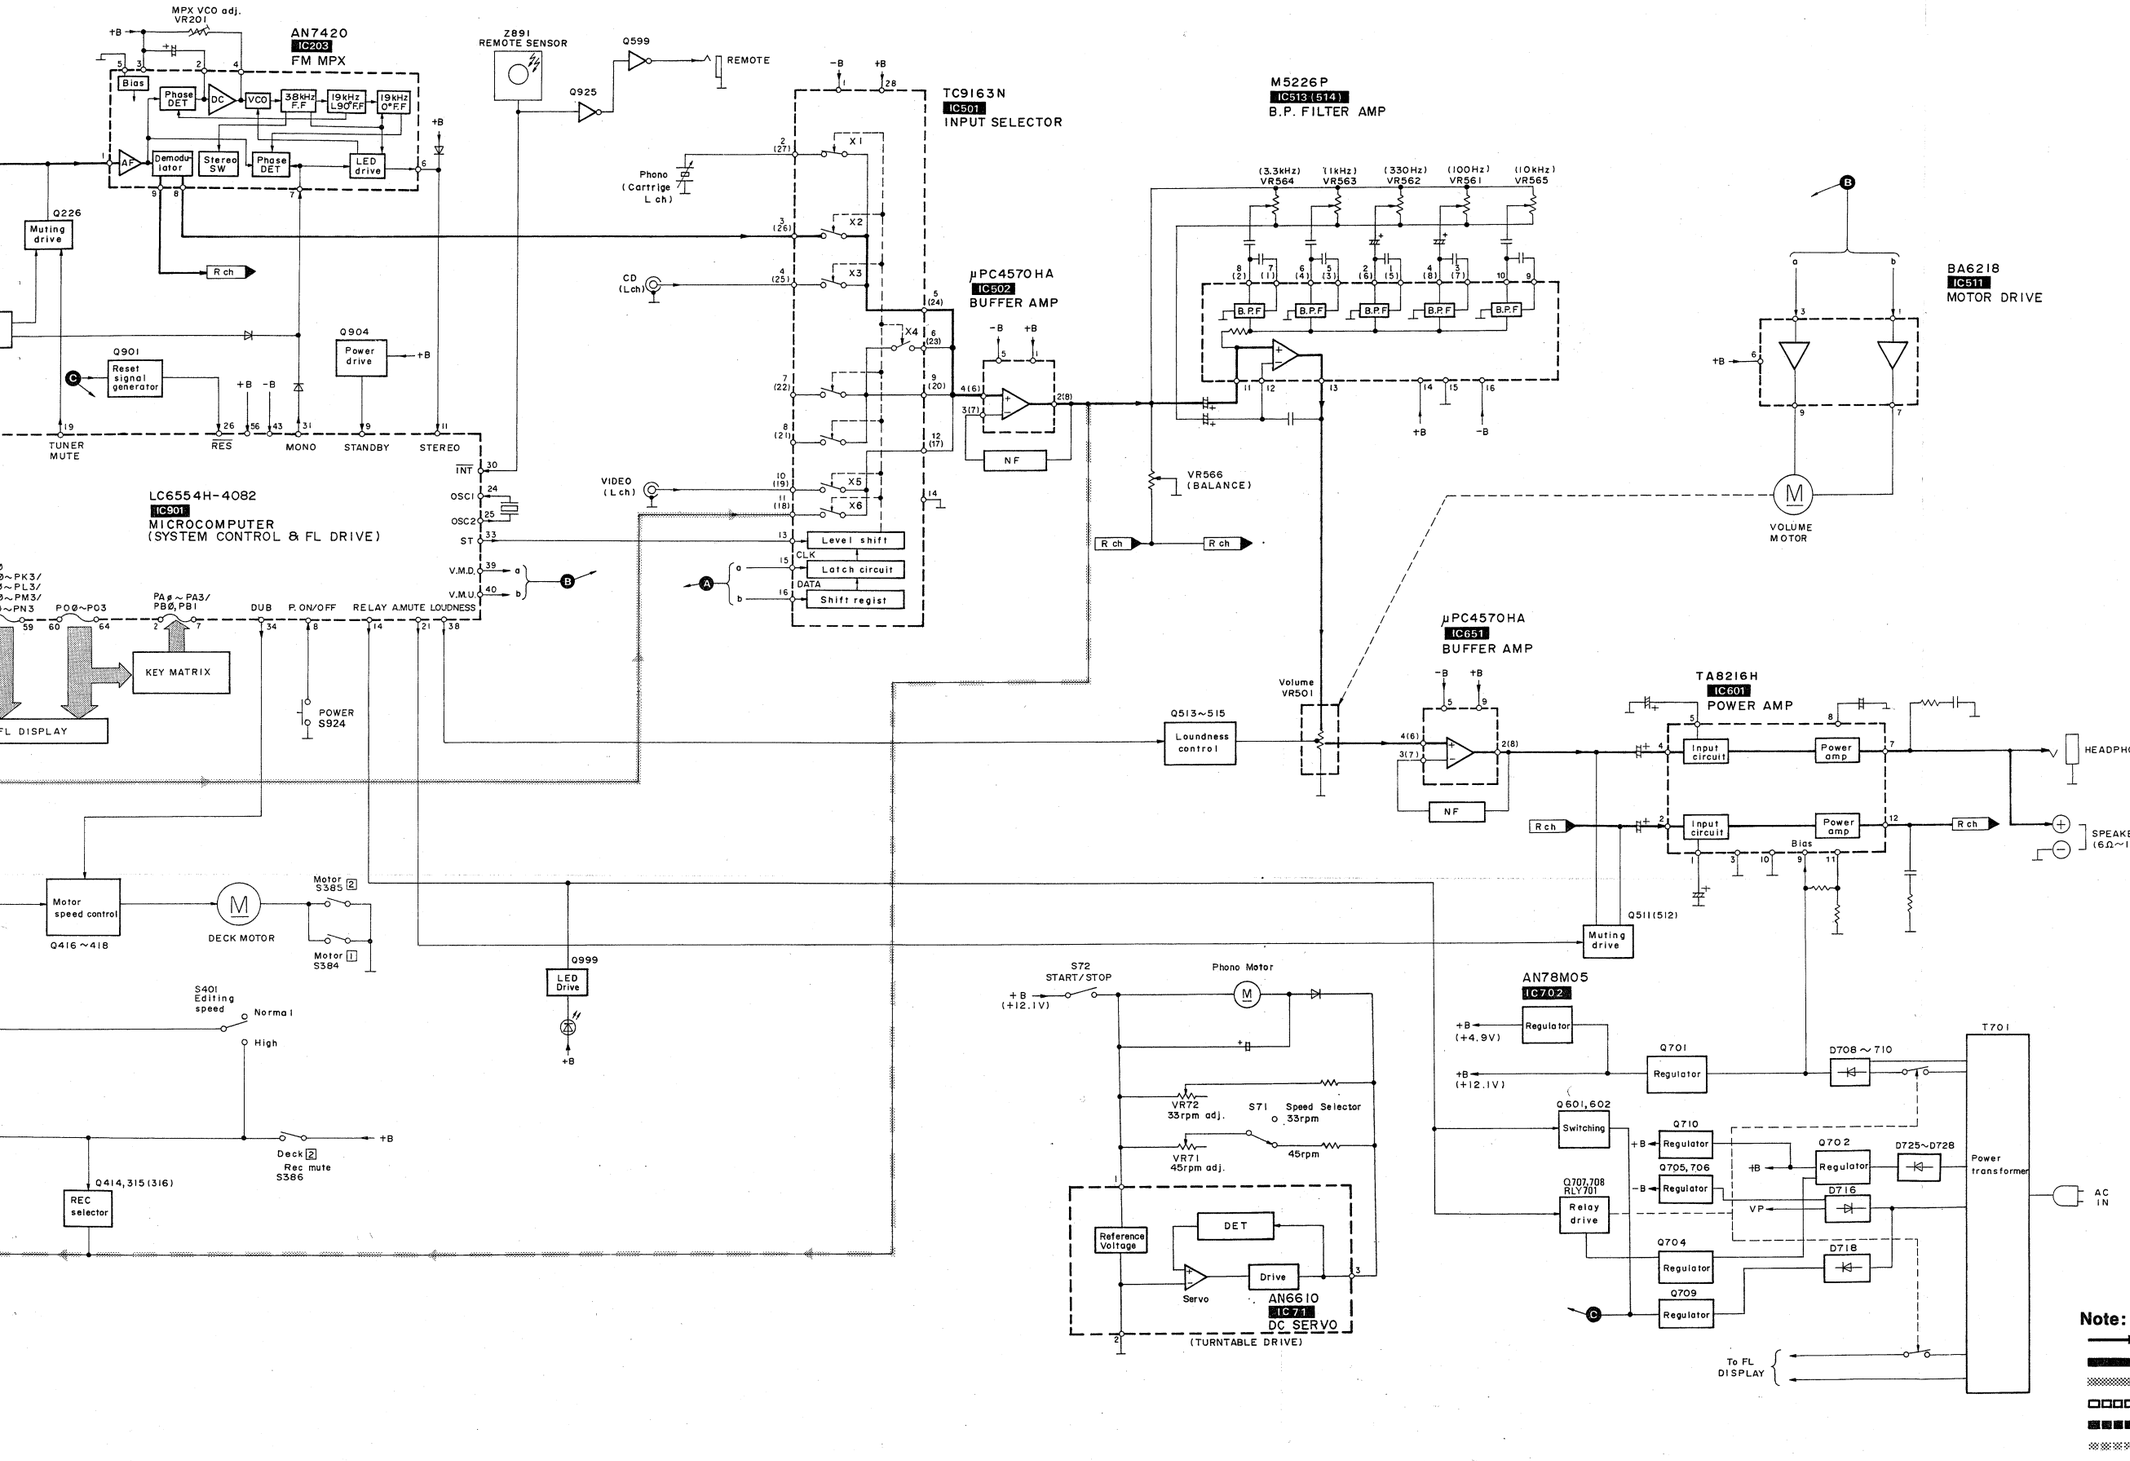

Note:

- FM Signal
- AM (MW/LW) Signal
- Playback Signal
- FM OSC Signal
- AM (MW/LW) OSC Signal
- Recording Signal

SA-HM35L SA-HM35L

■ SCHEMATIC DIAGRAM

(Parts list on pages 30～32, 39～41.)

(This schematic diagram may be modified at any time with the development of new technology.)

Notes:

- **S382** : Deck 1 muting switch in **"off"** position.
- **S383** : Deck 2 muting switch in **"off"** position.
- **S384** : Deck 1 motor switch in **"off"** position.
- **S385** : Deck 2 motor switch in **"off"** position.
- **S386** : Rec muting switch in **"off"** position.
- **S401** : Editing (EDITING SPEED) switch in **"normal"** position.
- **S499** : Beat proof (BEAT PROOF) switch.
- **S901** : Tuning (DOWN) switch.
- **S902** : Tuning (UP) switch.
- **S903** : Band (FM) switch.
- **S904** : Band (MW) switch.
- **S905** : FM mode (FM MODE) switch.
- **S906** : Loudness (LOUDNESS) switch.
- **S907, 908, 912～915, 918～921** : 24 Channel random preset tuning switch. S907: 9, S908: 0, S912: 5, S913: 6, S914: 7, S915: 8, S918: 1, S919: 2, S920: 3, S921: 4
- **S911, 916, 917, 922, 923** : Input selector switch. S911: AUX, S916: CD, S917: TAPE, S922: PHONO, S923: TUNER
- **S924** : Power (POWER) switch.
- **S925** : Band (LW) switch.
- Indicated voltage values are the standard values for the unit measured by the DC electronic circuit tester (high-impedance) with the chassis taken as standard. Therefore, there may exist some errors in the voltage values, depending on the internal impedance of the DC circuit tester.
  - ∗ All voltage values shown in circuitry are DC voltage in FM signal (monaural signal) reception mode.
  - ∗ Figure in ( ) Stand for DC-voltage in AM signal reception mode.
  - ∗ Figure in < > Stand for DC-voltage in playback signal reception mode.
  - ∗ Figure in << >> Stand for DC-voltage in REC signal reception mode.
  - ∗ Figure in ☐ stand for DC-voltage in muting mode.

∗—< >— Positive voltage lines
---< >--- Negative voltage lines
AM (MW/LW) OSC signal
FM signal
AF signal
AM (MW/LW) signal
FM OSC signal
Phono signal
Rec signal
PB signal

- Important safety notice:
  Components identified by ⚠ mark have special characteristics important for safety.
  When replacing any of these components use only manufacturer's specified parts.
- ∗**L5, L6, L7 and L206** are coils formed on the P.C.B. and are thus not found on the replacement parts list.

∗ **Caution**!
IC and LSI are sensitive to static electricity.
Secondary trouble can be prevented by taking care during repair.
∗ Cover the parts boxes made of plastics with aluminum foil.
∗ Ground the soldering iron.
∗ Put a conductive mat on the work table.
∗ Do not touch the legs of IC or LSI with the fingers directly.

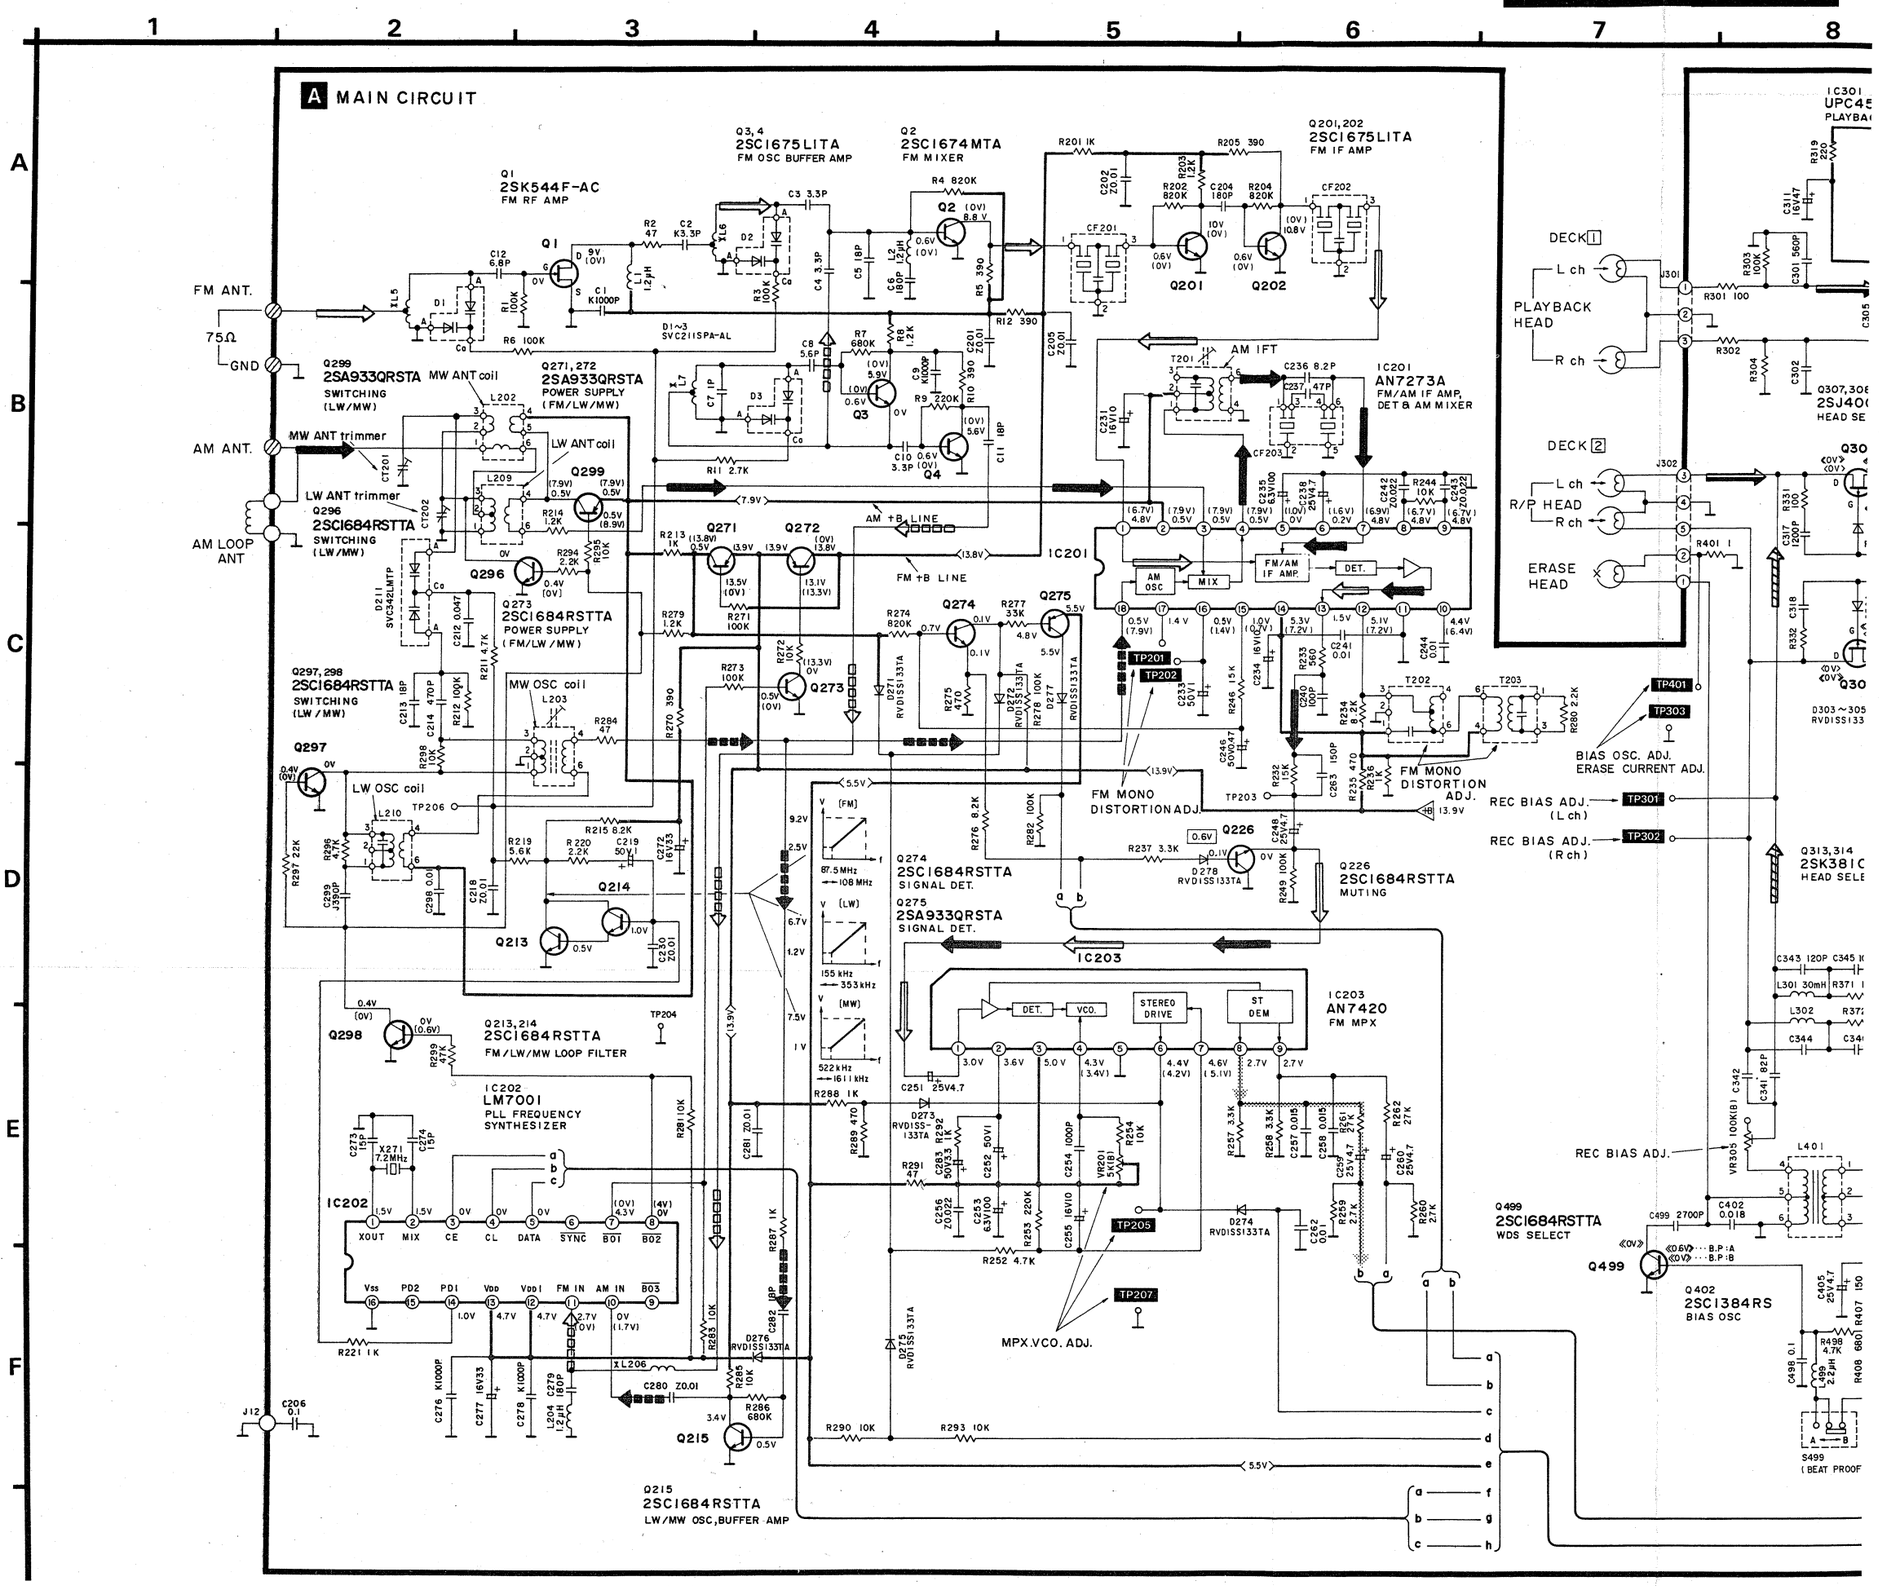

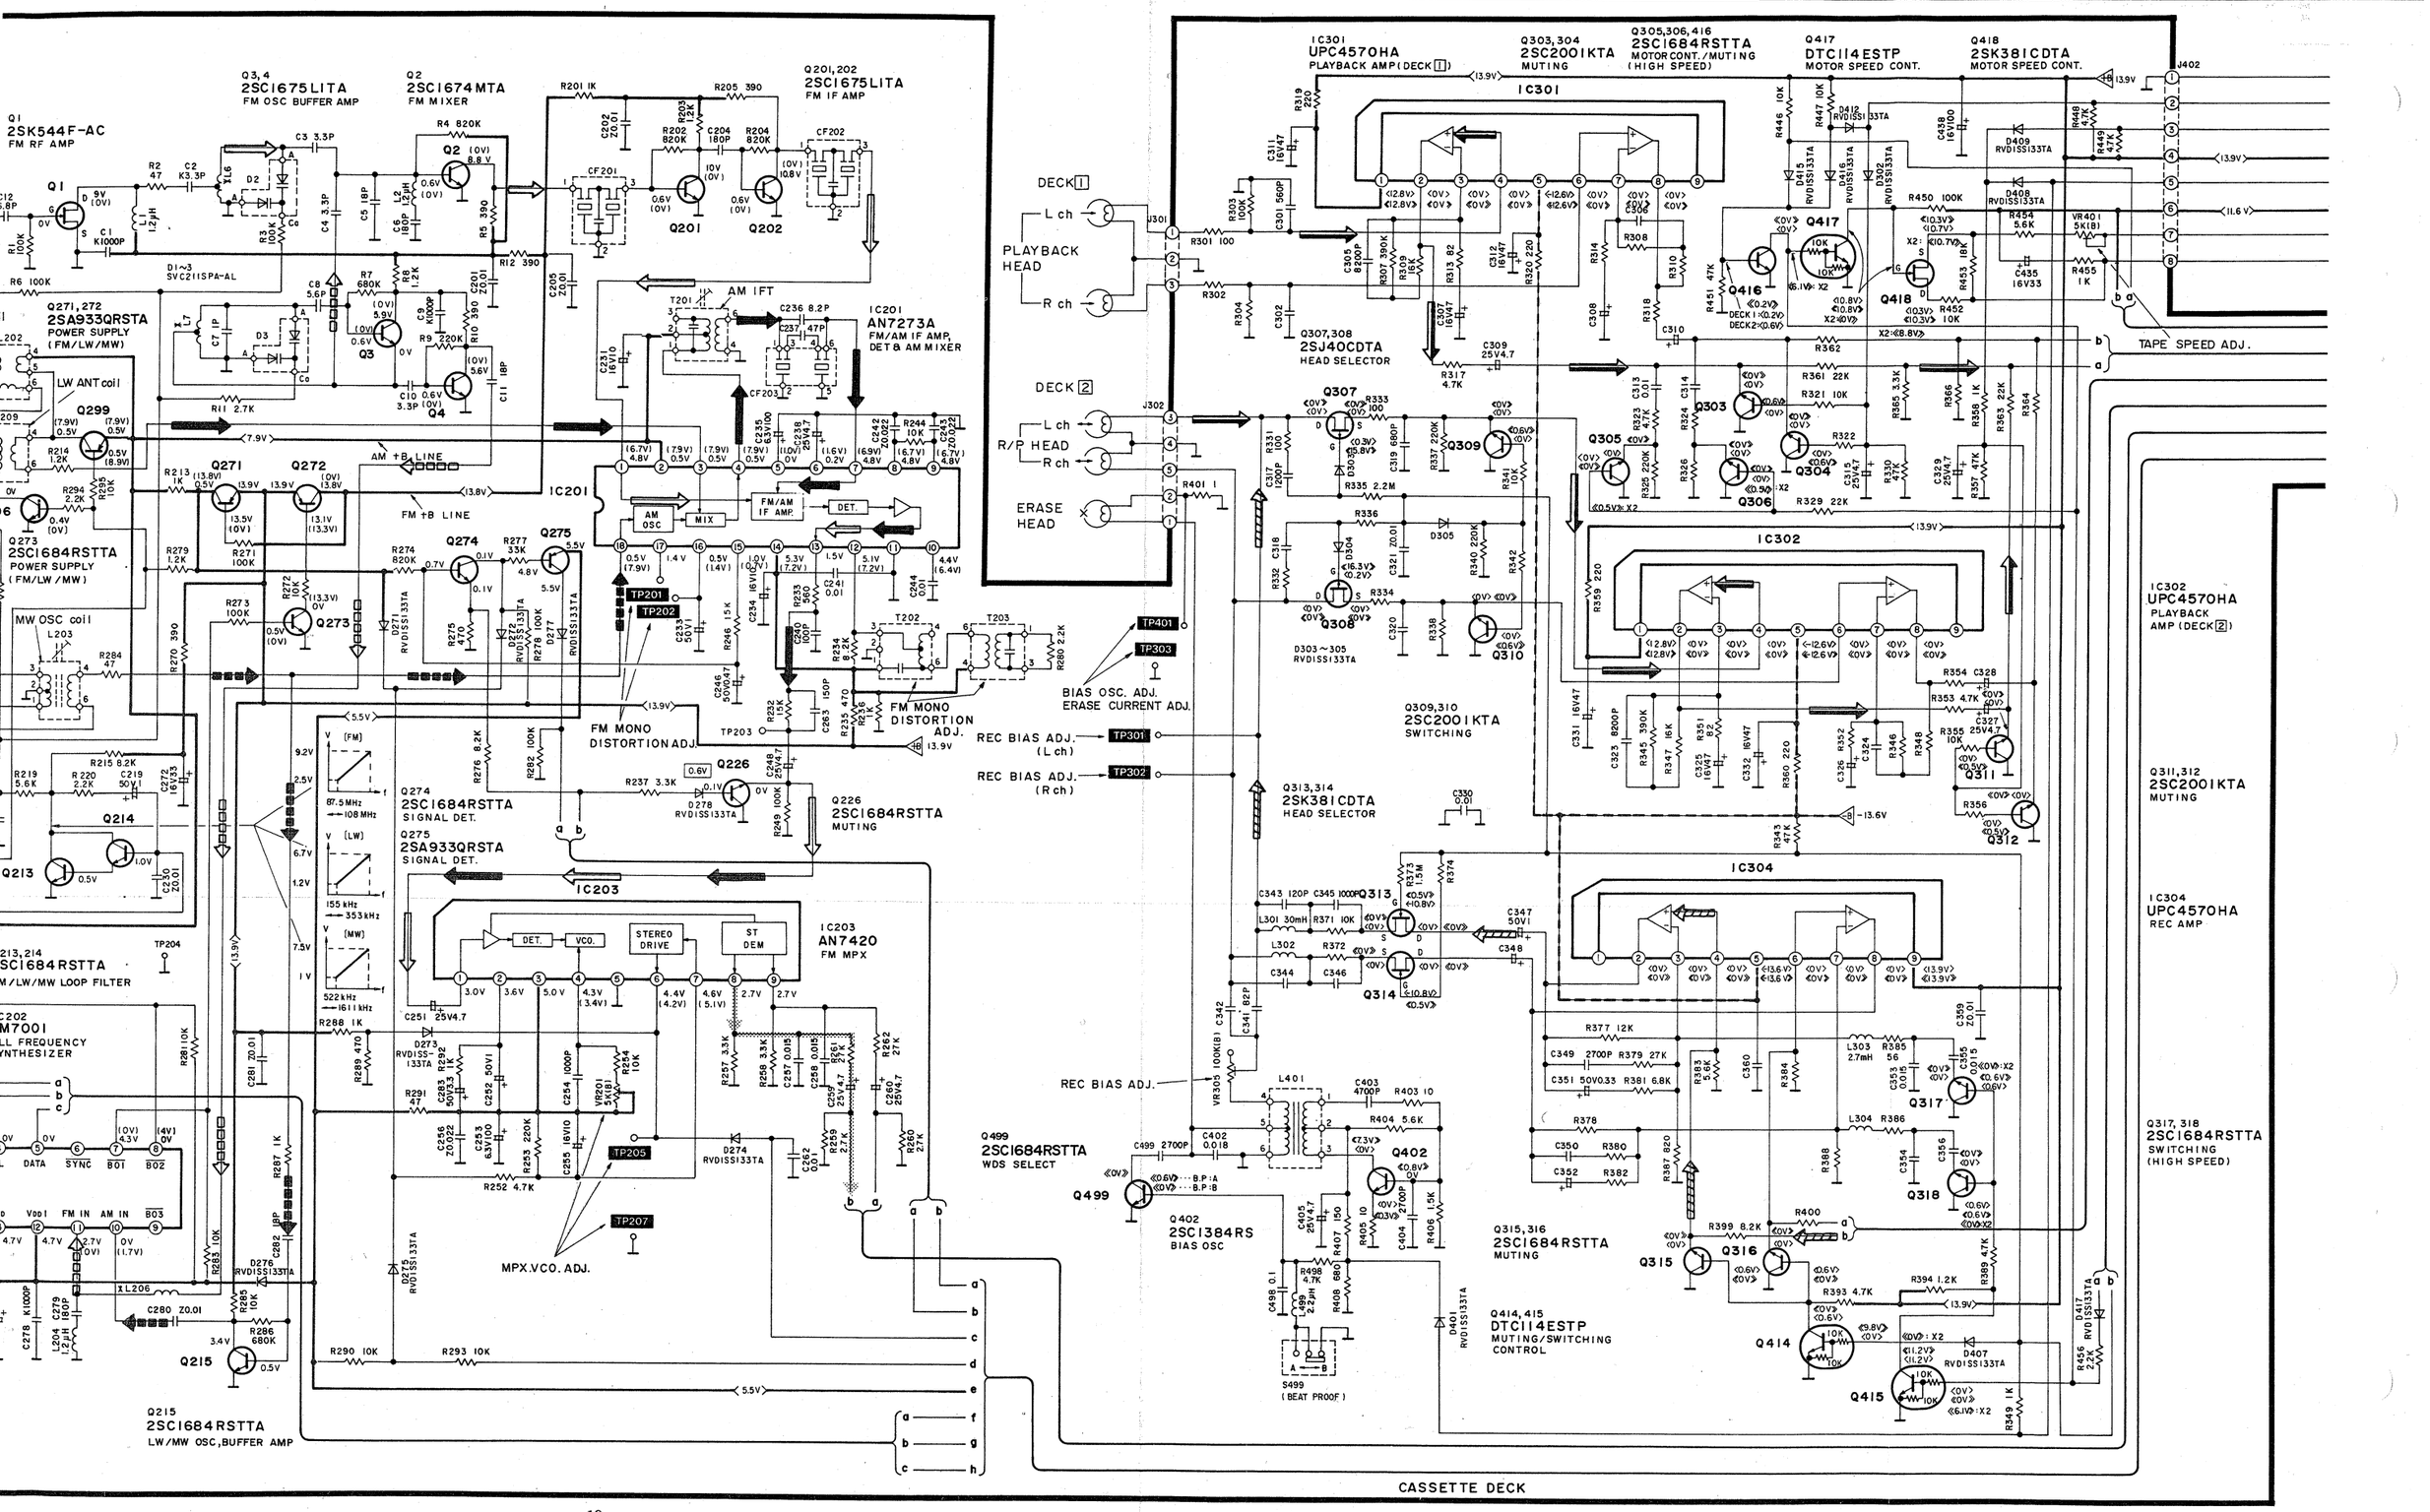
Q1 2SK544F-AC FM RF AMP
Q3,4 2SC1675LITA FM OSC BUFFER AMP
Q2 2SC1674MTA FM MIXER
Q201,202 2SC1675LITA FM IF AMP
Q271,272 2SA933QRSTA POWER SUPPLY (FM/LW/MW)
Q273 2SC1684RSTTA POWER SUPPLY (FM/LW/MW)
IC201 AN7273A FM/AM IF AMP, DET & AM MIXER
AM IFT
LW ANT coil
MW OSC coil
AM +B LINE
FM +B LINE
FM MONO DISTORTION ADJ.
Q274 2SC1684RSTTA SIGNAL DET.
Q275 2SA933QRSTA SIGNAL DET.
Q226 2SC1684RSTTA MUTING
IC203 AN7420 FM MPX
MPX.VCO. ADJ.
Q214
Q213
IC202 M7001 PLL FREQUENCY SYNTHESIZER
Q215 2SC1684RSTTA LW/MW OSC,BUFFER AMP
DECK 1
L ch
PLAYBACK HEAD
R ch
DECK 2
L ch
R/P HEAD
R ch
ERASE HEAD
J301
J302
IC301 UPC4570HA PLAYBACK AMP (DECK 1)
Q303,304 2SC2001KTA MUTING
Q305,306,416 2SC1684RSTTA MOTOR CONT./MUTING (HIGH SPEED)
Q417 DTC114ESTP MOTOR SPEED CONT.
Q418 2SK381CDTA MOTOR SPEED CONT.
Q307,308 2SJ40CDTA HEAD SELECTOR
Q309,310 2SC2001KTA SWITCHING
Q313,314 2SK381CDTA HEAD SELECTOR
Q499 2SC1684RSTTA WDS SELECT
Q402 2SC1384RS BIAS OSC
Q315,316 2SC1684RSTTA MUTING
Q414,415 DTC114ESTP MUTING/SWITCHING CONTROL
Q311,312 2SC2001KTA MUTING
Q317,318 2SC1684RSTTA SWITCHING (HIGH SPEED)
IC302 UPC4570HA PLAYBACK AMP (DECK 2)
IC304 UPC4570HA REC AMP
TAPE SPEED ADJ.
BIAS OSC. ADJ. ERASE CURRENT ADJ.
REC BIAS ADJ. (L ch)
REC BIAS ADJ. (R ch)
REC BIAS ADJ.
S499 (BEAT PROOF)
CASSETTE DECK

13 14 15 16 17 18 19 20 21 22

S382 MUTING (DECK 1)
S383 MUTING (DECK 2)
S386 REC MUTE (DECK 2)
S384 MOTOR (DECK 1)
S385 MOTOR (DECK 2)
MOTOR

C OPERATION CIRCUIT

Z902 FL DISPLAY(SAD8MT36GK)

Q902,903 2SC1684RSTTA FL DRIVE

IC901 LC6554H-4082 SYSTEM CONTROL & FL DRIVE

SYSTEM CONTROL & FL DRIVE

Q904 2SA933QRSTA POWER SUPPLY (STANDBY)

Q901 2SC1684RSTTA RESET SIGNAL GENERATOR

Q925 2SC1684RSTTA SWITCHING(REMOTE)

Z891 AIOH3029HO (REMOTE SENSOR)

D923,924,999 SVGLB74UR3HL

Q923,924,999 2SC1684RSTTA LED DRIVE

Q999 (Power)

ONLY USE WITH SL-HM50B

REMOTE

Q599 2SC1

CD

AUX

IC501

INPUT SELECTOR

IC502 µPC4570HA BUFFER AMP

IC513,514 M5226P B.P.FILTER AMP

GRAPHIC EQUALIZER AMP

IC514

IC513

(BALANCE) VR566 100K(G)

VR561-1 100K(G) (100Hz)
VR562-1 100K(G) (330Hz)
VR563-1 100K(G) (1kHz)
VR564-1 100K(G) (3.3kHz)
VR565-1 100K(G) (10kHz)
VR561-2 100K(G)
VR562-2 100K(G)
VR563-2 100K(G)
VR564-2 100K(G)
VR565-2 100K(G)

B EDITING SPEED SWITCH CIRCUIT

S401 (EDITING SPEED) normal high

J901A J903A J904A J902A J11 J903B

22 23 24 25 26 27 28 29 30 31

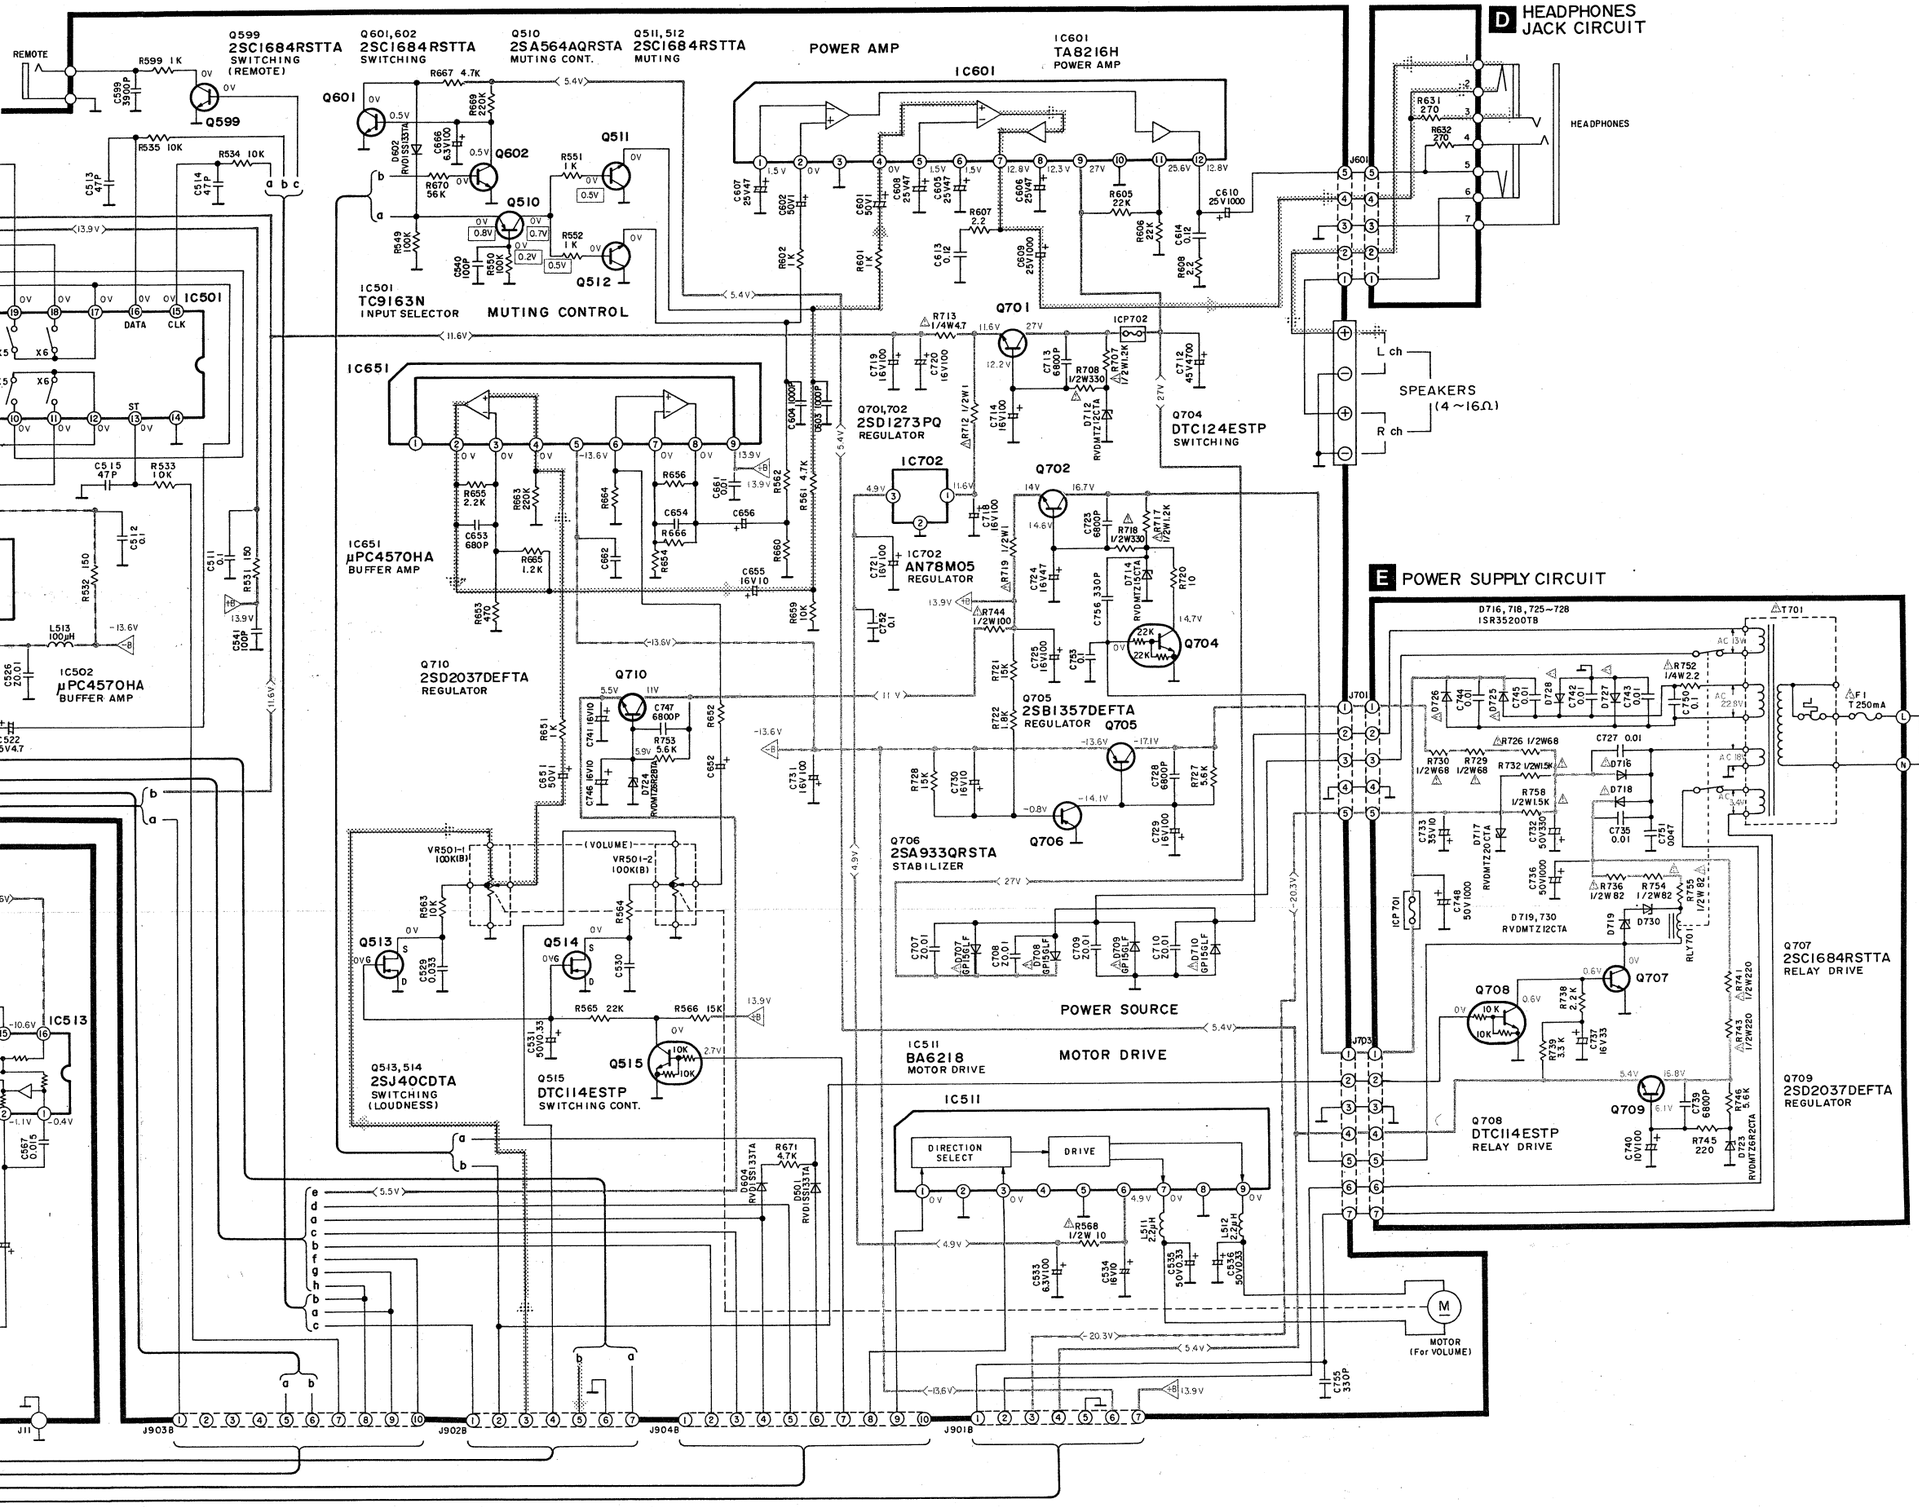

■ PRINTED CIRCUIT BOARDS

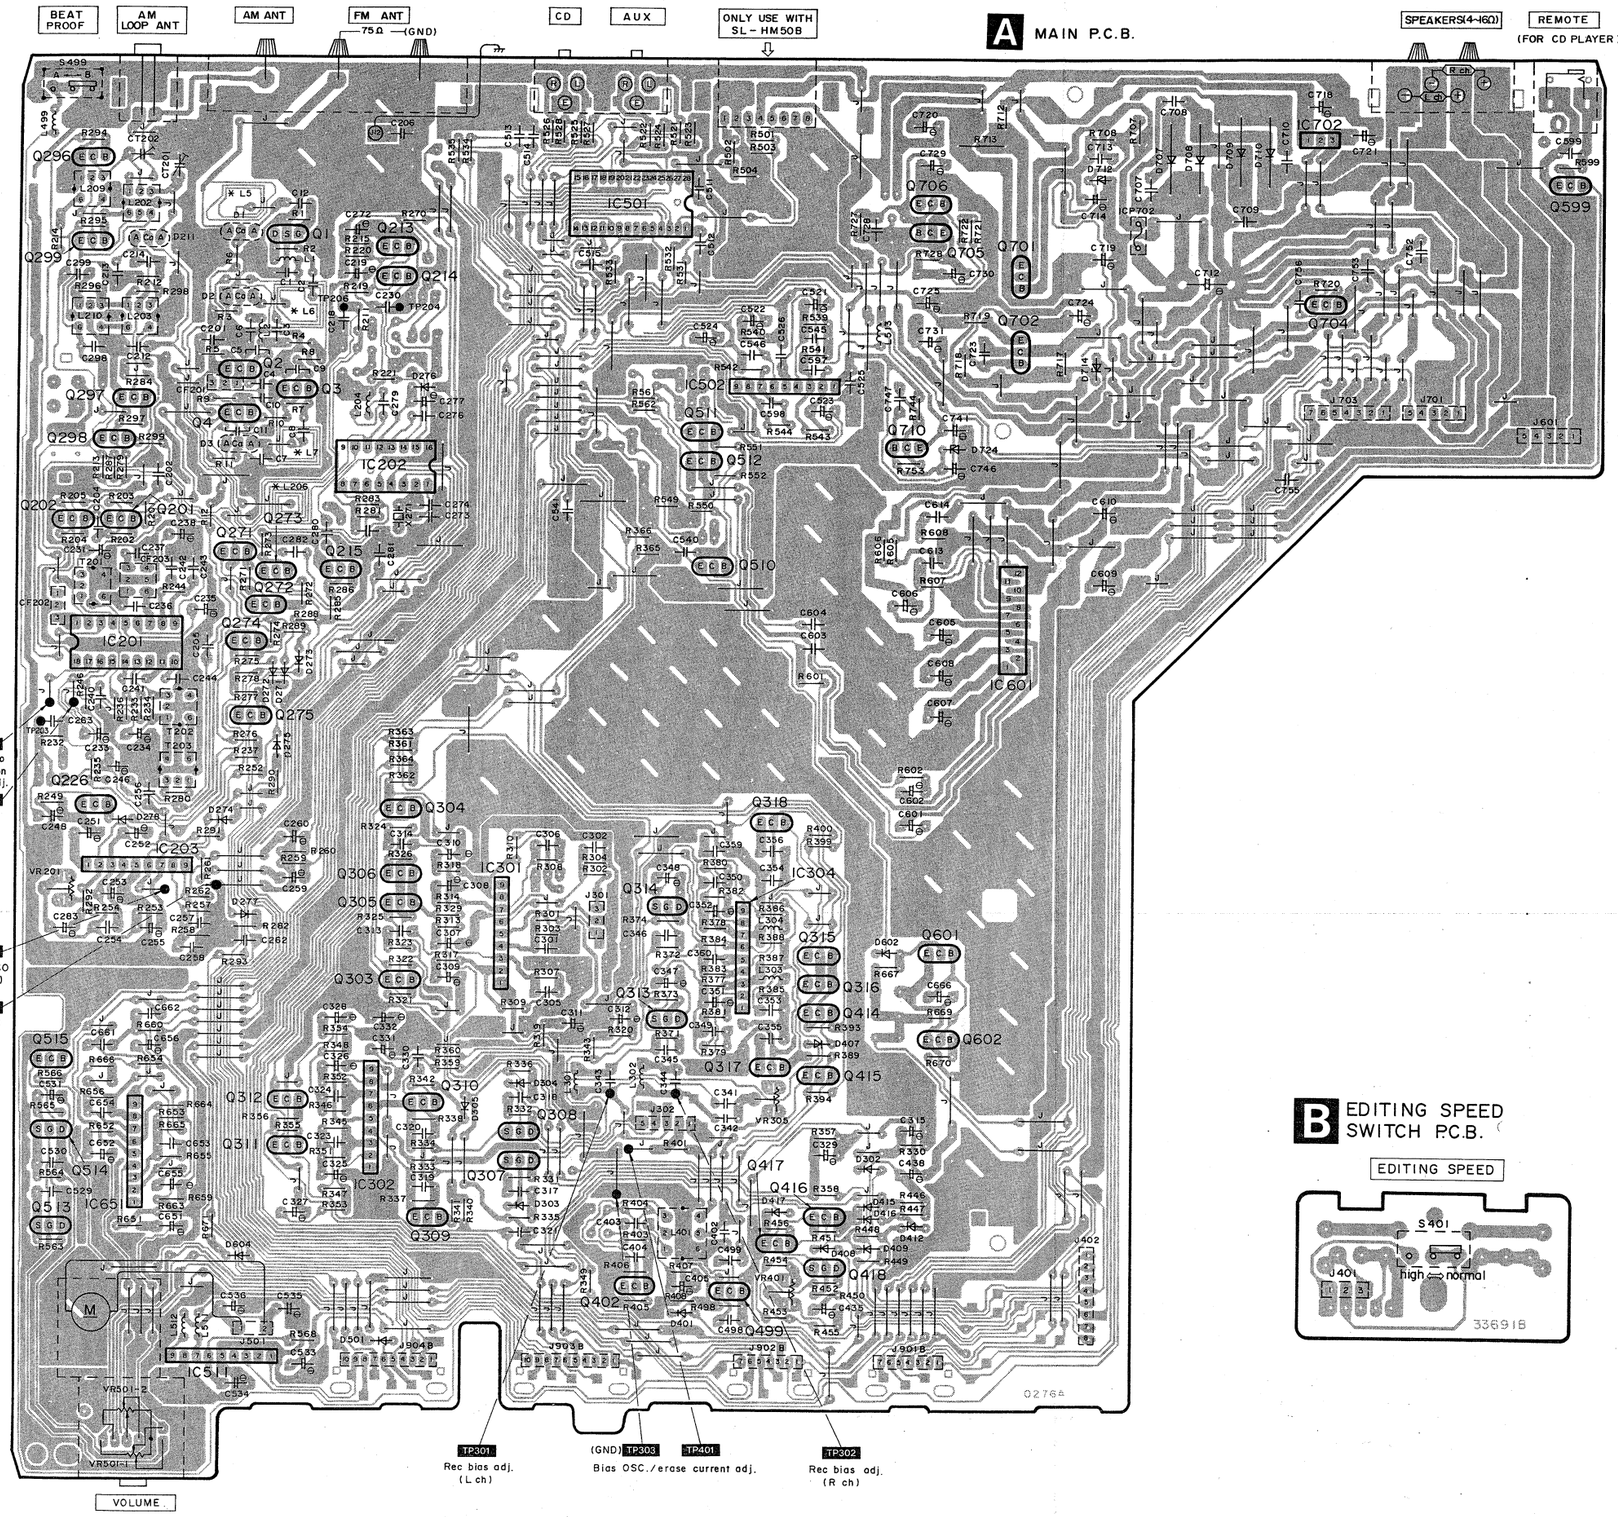

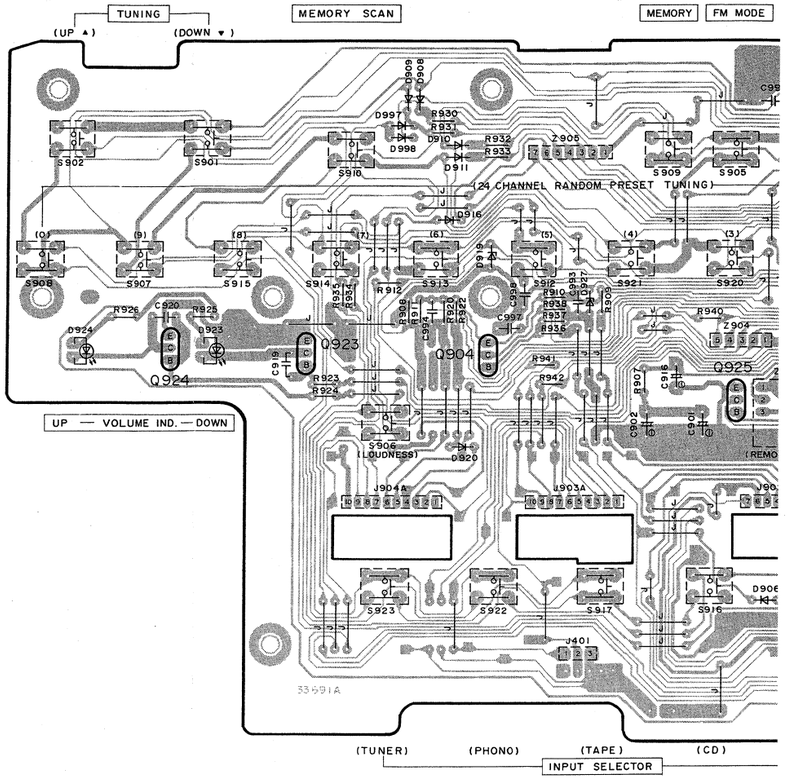

B EDITING SPEED SWITCH P.C.B.

D HEADPHONES JACK P.C.B.

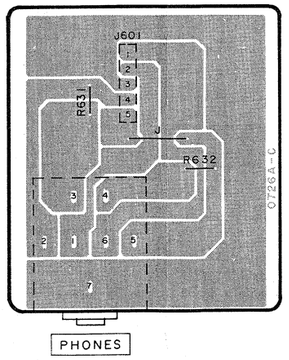

E POWER SUPPLY P.C.B

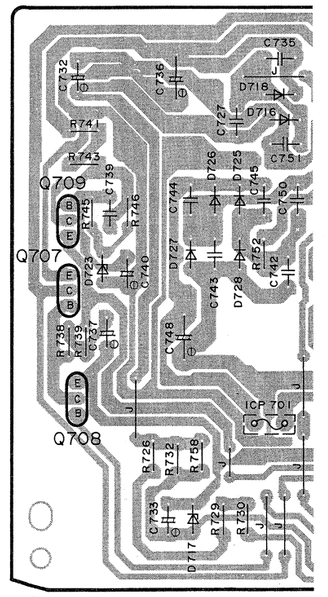

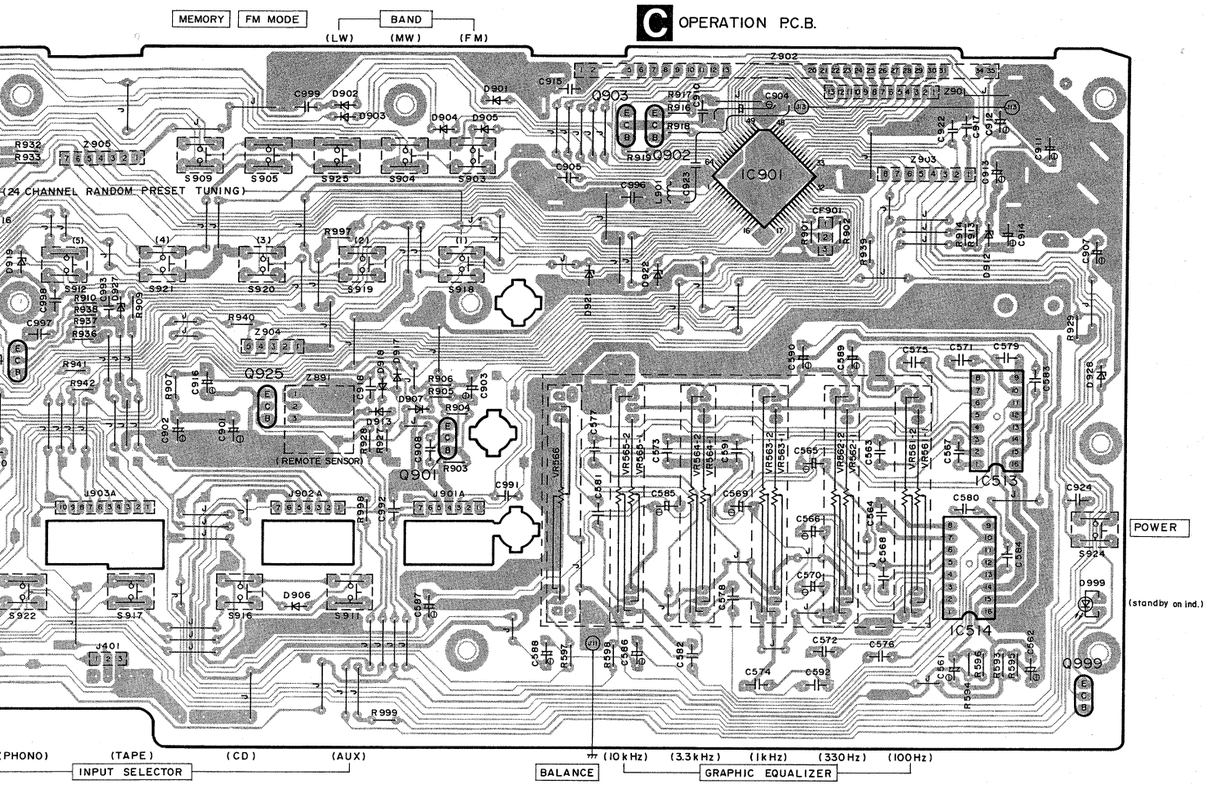

E POWER SUPPLY P.C.B.

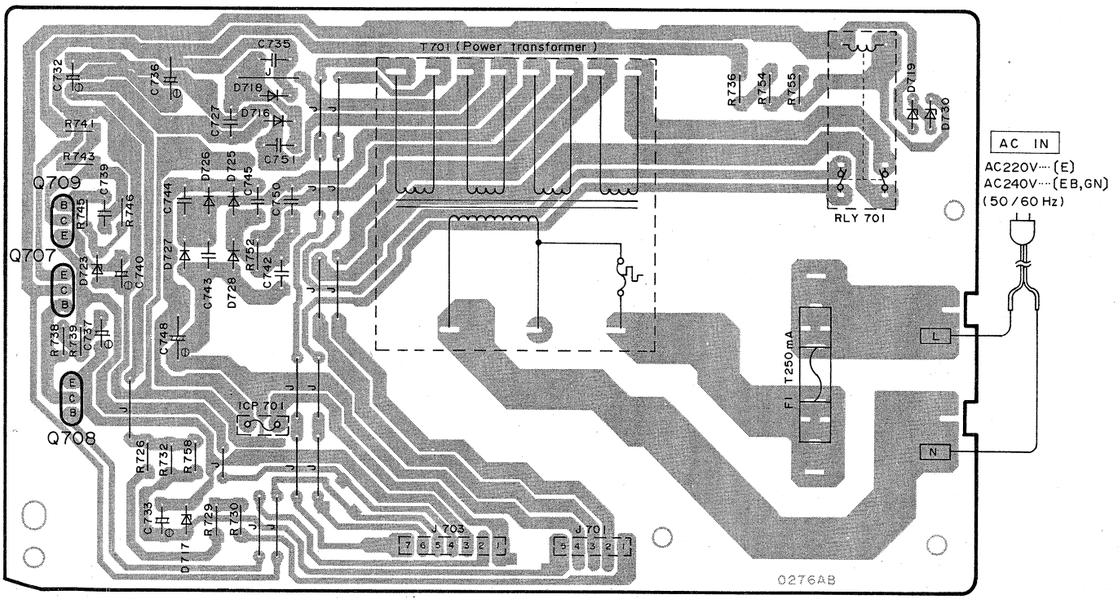

WIRING CONNECTION DIAGRAM

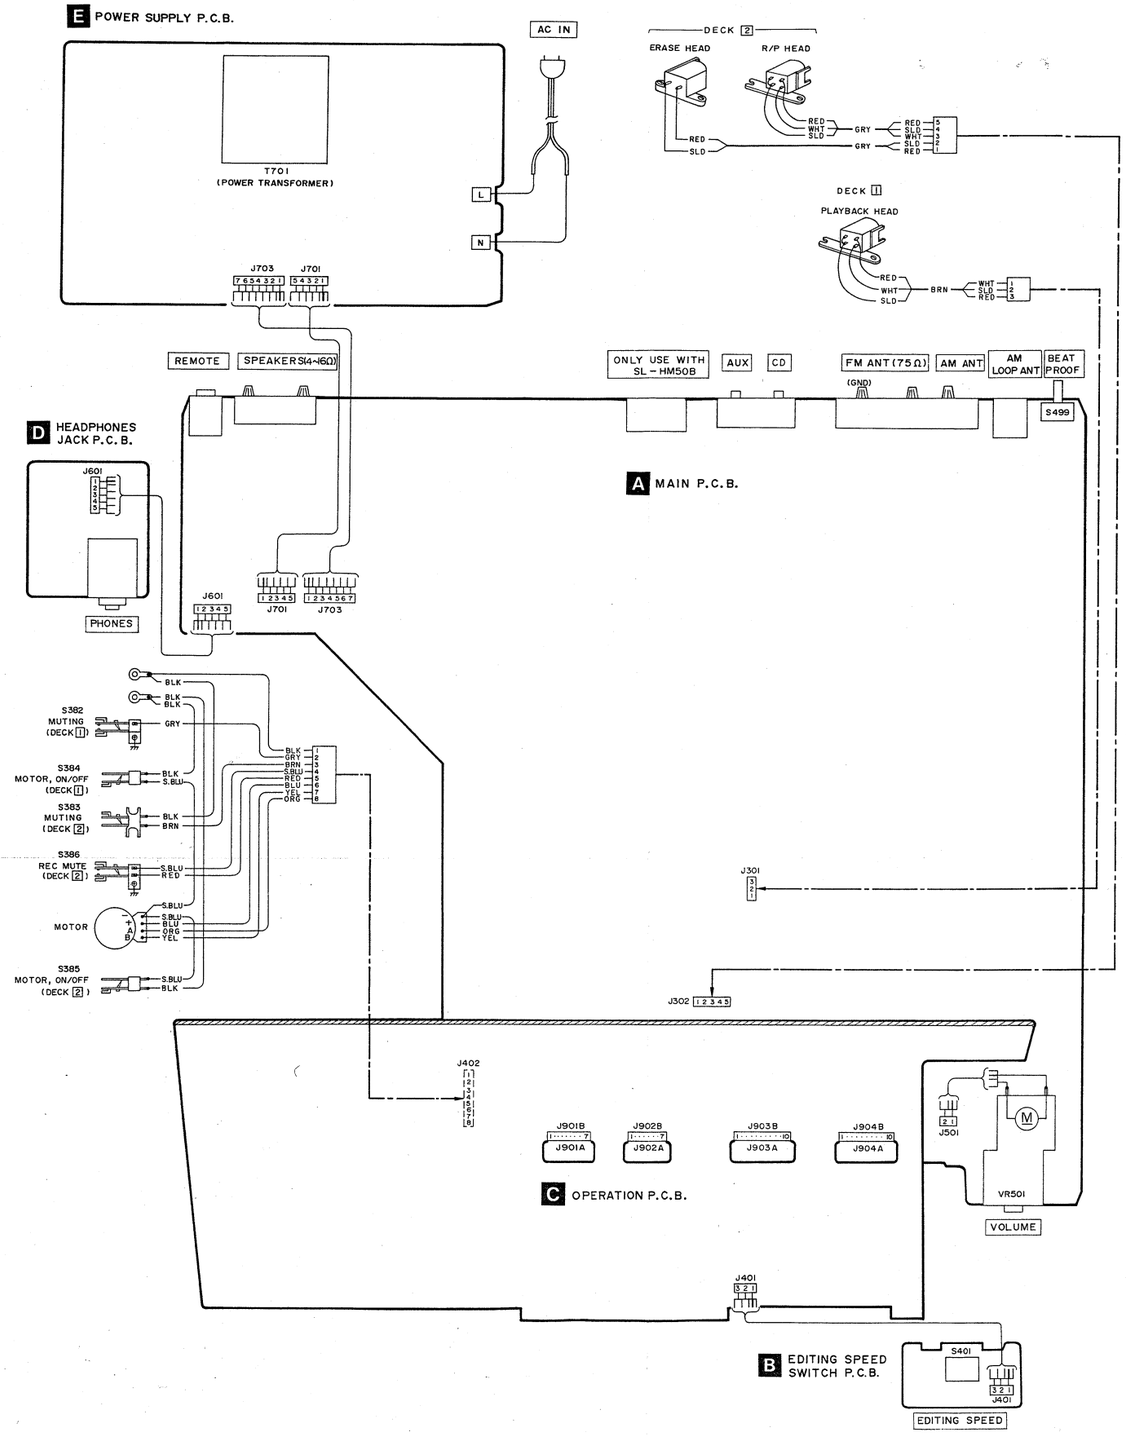

■ TERMINAL GUIDE OF IC'S, TRANSISTORS AND DIODES

TC9163N	28 PIN
M5226P	16 PIN
LM7001	8 PIN
AN7273A	18 PIN

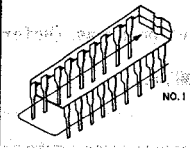

AN7420	9 PIN
BA6218	
UPC4570HA	

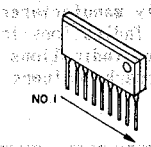

LC6554H-4082	64 PIN

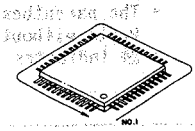

TA8216H	12 PIN



AN78M05

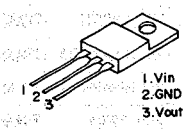

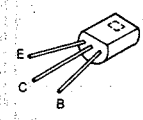

2SC1674MTA
2SC1675LITA
2SC1384RS
2SC1684RSTTA
2SC2001KTA
2SA564AQRSTA

2SD1273PQ

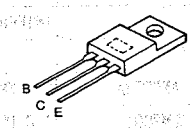

2SJ40CDTA
2SK381CDTA
2SK544F-AC



2SA933QRSTA

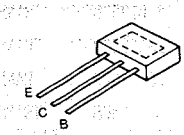

DTC114ESTP
DTC124ESTP

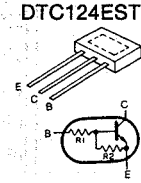

RVD1SS133TA
MA165TA
1SR35200TB
GP15GLF

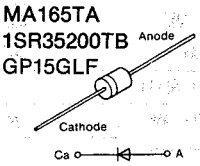

SVGLB74UR3HL

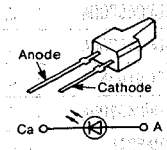

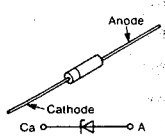

RVDMTZ12CTA
RVDMTZ15CTA
RVDMTZ20CTA
RVDMTZ6R2CTA
RVDMTZ8R2CTA
RVDMTZ6R2BTA

SVC211SPA-AL
SVC342LMTP

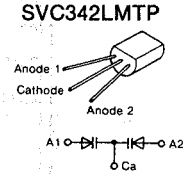

2SB1357DEFTA
2SD2037DEFTA

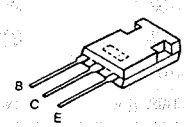

■ REPLACEMENT PARTS LIST

Notes : * Important safety notice:
Components identified by ⚠ mark have special characteristics important for safety. When replacing any of these components use only manufacturer's specified parts.
* The parenthesized indications in the Remarks columns specify the areas. (Refer to the cover page for area.)
Parts without these indications can be used for all areas.
* Ⓜ Indicates in Remarks columns parts that are supplied by MESA.

Ref. No.	Part No.	Part Name & Description	Remarks
		INTEGRATED CIRCUITS	
IC201	AN7273A	I. C, FM/AM IF AMP&MIXER	
IC202	LM7001	I. C, PLL FREQ. SYNTHESIZER	
IC203	AN7420	I. C, FM MPX	
IC301	UPC4570HA	I. C, P. B. AMP.	Ⓜ
IC302	UPC4570HA	I. C, P. B. AMP.	Ⓜ
IC304	UPC4570HA	I. C, REC AMP.	Ⓜ
IC501	TC9163N	I. C, INPUT SELECTOR	
IC502	UPC4570HA	I. C, BUFFER AMP.	Ⓜ
IC511	BA6218	I. C, MOTOR DRIVE	
IC513	M5226P	I. C, B. P. F. AMP.	
IC514	M5226P	I. C, B. P. F. AMP.	
IC601	TA8216H	I. C, REGULATOR	Ⓜ
IC651	UPC4570HA	I. C, BUFFER AMP	Ⓜ
IC702	AN78M05	I. C, REGULATOR	
IC901	LC6554H-4082	I. C, MICROCOMPUTER	Ⓜ
		TRANSISTORS	
Q1	2SK544F-AC	TRANSISTOR	
Q2	2SC1674M	TRANSISTOR	
Q3, 4	2SC1675L1TA	TRANSISTOR	Ⓜ
Q201, 202	2SC1675L1TA	TRANSISTOR	Ⓜ
Q213-215	2SC1684RSTTA	TRANSISTOR	Ⓜ
Q226	2SC1684RSTTA	TRANSISTOR	Ⓜ
Q271, 272	2SA933QRSTA	TRANSISTOR	Ⓜ
Q273, 274	2SC1684RSTTA	TRANSISTOR	Ⓜ
Q275	2SA933QRSTA	TRANSISTOR	Ⓜ
Q296-298	2SC1684RSTTA	TRANSISTOR	Ⓜ
Q299	2SA933QRSTA	TRANSISTOR	Ⓜ
Q303, 304	2SC2001KTA	TRANSISTOR	
Q305, 306	2SC1684RSTTA	TRANSISTOR	Ⓜ
Q307, 308	2SJ40CDTA	TRANSISTOR	
Q309-312	2SC2001KTA	TRANSISTOR	
Q313, 314	2SK381CDTA	TRANSISTOR	
Q315-318	2SC1684RSTTA	TRANSISTOR	Ⓜ
Q402	2SC1384RS	TRANSISTOR	
Q414, 415	DTC114ESTP	TRANSISTOR	
Q416	2SC1684RSTTA	TRANSISTOR	Ⓜ
Q417	DTC114ESTP	TRANSISTOR	
Q418	2SK381CDTA	TRANSISTOR	
Q499	2SC1684RSTTA	TRANSISTOR	Ⓜ
Q510	2SA564AQ	TRANSISTOR	
Q511, 512	2SC1684RSTTA	TRANSISTOR	Ⓜ

Ref. No.	Part No.	Part Name & Description	Remarks
Q513, 514	2SJ40CDTA	TRANSISTOR	
Q515	DTC114ESTP	TRANSISTOR	
Q599	2SC1684RSTTA	TRANSISTOR	Ⓜ
Q601, 602	2SC1684RSTTA	TRANSISTOR	Ⓜ
Q701	2SD1273PQ	TRANSISTOR	
Q702	2SD1273PQ	TRANSISTOR	
Q704	DTC124ESTP	TRANSISTOR	
Q705	2SB1357DEFTA	TRANSISTOR	
Q706	2SA933QRSTA	TRANSISTOR	Ⓜ
Q707	2SC1684RSTTA	TRANSISTOR	Ⓜ
Q708	DTC114ESTP	TRANSISTOR	
Q709	2SD2037DEFTA	TRANSISTOR	
Q710	2SD2037DEFTA	TRANSISTOR	
Q901-903	2SC1684RSTTA	TRANSISTOR	Ⓜ
Q904	2SA933QRSTA	TRANSISTOR	Ⓜ
Q923-925	2SC1684RSTTA	TRANSISTOR	Ⓜ
Q999	2SC1684RSTTA	TRANSISTOR	Ⓜ
		DIODES	
D1-3	SVC211SPA-AL	DIODE	
D211	SVC342LMTP	DIODE	
D271-278	RVD1SS133TA	DIODE	
D302-305	RVD1SS133TA	DIODE	
D401	RVD1SS133TA	DIODE	
D407-409	RVD1SS133TA	DIODE	
D412	RVD1SS133TA	DIODE	
D415-417	RVD1SS133TA	DIODE	
D501	RVD1SS133TA	DIODE	
D602	RVD1SS133TA	DIODE	
D604	RVD1SS133TA	DIODE	
D707-710	GP15GLF	DIODE	
D714	RVDMTZ15CTA	DIODE	Ⓜ
D712	RVDMTZ12CTA	DIODE	
D716	1SR35200TB	DIODE	
D717	RVDMTZ20CTA	DIODE	Ⓜ
D718	1SR35200TB	DIODE	
D719	RVDMTZ12CTA	DIODE	
D723	RVDMTZ6R2CTA	DIODE	Ⓜ
D724	RVDMTZ6R2BTA	DIODE	
D725-728	1SR35200TB	DIODE	
D730	RVDMTZ12CTA	DIODE	
D901-906	RVD1SS133TA	DIODE	
D907	MA165TA	DIODE	
D908-911	RVD1SS133TA	DIODE	
D912	RVDMTZ6R2CTA	DIODE	Ⓜ

Ref. No.	Part No.	Part Name & Description	Remarks
D913	RVD1SS133TA	DIODE	
D916-918	RVD1SS133TA	DIODE	
D919	RVDMTZ8R2CTA	DIODE	M
D920	RVD1SS133TA	DIODE	
D921, 922	RVDMTZ8R2CTA	DIODE	M
D923, 924	SVGLB74UR3HL	DIODE	
D927, 928	RVDMTZ8R2CTA	DIODE	M
D997, 998	RVD1SS133TA	DIODE	
D999	SVGLB74UR3HL	DIODE	
		I. C. PROTECTOR	
ICP701	SRUF25	IC PROTECTOR	
ICP702	SRUF25	IC PROTECTOR	
		VARIABLE RESITORS	
VR201	EVNDXAA00B53	V. R, MPX VCO ADJ.	
VR305	EVNDXAA00B15	V. R, REC BIAS ADJ.	
VR401	EVNDXAA00B53	V. R, TAPE SPEED ADJ.	
VR501	EUWMUGF20B15	V. R, VOLUME CONTROL	M
VR561	EWAHQ2C95G15	V. R, EQ CONT. /100Hz	M
VR562	EWAHQ2C95G15	V. R, EQ CONT. /330Hz	M
VR563	EWAHQ2C95G15	V. R, EQ CONT. /1kHz	M
VR564	EWAHQ2C95G15	V. R, EQ CONT. /3. 3kHz	M
VR565	EWAHQ2C95G15	V. R, EQ CONT. /10kHz	M
VR566	EWAHV2C95G15	V. R, BALANCE CONTROL	M
		VARIABLE CAPACITORS	
CT201	ECRLA010A53R	V. C, MW ANT TRIMMER	
CT202	ECRLA020E53R	V. C, LW ANT TRIMMER	
		COILS AND TRANSFORMERS	
L1, 2	RLQZP1R2MT-Y	COIL	M
L202	SLA2B3-P	ANTENNA COIL	
L203	SL02B9R-M	OSCILLATOR COIL	M
L204	RLQZP1R2MT-Y	COIL	M
L209	SLA1B7R-P	COIL	
L210	SL01B5-M	COIL	M
L301, 302	SLQX303-1KT	CHOKE COIL	
L303, 304	QLQX2722D	COIL	
L401	SL09C27-M	COIL	M
L499	RLQZP2R2MT-Y	MPX COIL	
L511, 512	RLQZP2R2MT-Y	MPX COIL	
L513	RLQZP101KT-Y	MPX COIL	
L901	RLQZP101KT-Y	MPX COIL	
T201	SLI2B101-M	I. F. T	
T202	SLI4B511-Z	I. F. T	
T203	SLI4B513-Z	I. F. T	
T701	RTP1M3B001-V	POWER TRANSFORMER	(EB, GN) ⚠ M

Ref. No.	Part No.	Part Name & Description	Remarks
T701	RTP1M3F001-V	POWER TRANSFORMER	(E) ⚠ M
		COMPONENT COMBINATIONS	
Z891	A1QH3029H0	COMBINATION PART	
Z901	EXFP12331MF	COMBINATION PART	
Z903	EXBP87103J-R	COMBINATION PART	
Z904	EXBP84103JR	COMBINATION PART	
Z905	EXBP86104J-R	COMBINATION PART	M
		FILTERS	
CF201, 202	SVFE107MS2-A	FILTER	
CF203	SVFSFZ450F7L	FILTER	
CF901	RVBCST4R00MT	FILTER	
		OSCILLATOR	
X271	SVQ49U722-D	CRYSTAL OSCILLATOR	
		DISPLAY	
Z902	SAD8MT36GK	FL DISPLAY TUBE	M
		FUSES	
F1	XBA2C025TB0	FUSE	⚠
		SWITCHES	
S382	RFA95ZA	SW, MUTING (DECK 1)	M
S383	RFA96ZA	SW, MUTING (DECK 2)	M
S384	RFA91ZA	SW, MOTOR (DECK 1)	
S385	RFA91ZA	SW, MOTOR (DECK 2)	
S386	RFA94ZA	SW, REC MUTING (DECK 2)	M
S401	SSS167	SW, EDITING SPEED	
S499	SSS153	SW, BEET PROOF	
S901	SSG13	SW, (DOWN)	
S902	SSG13	SW, (UP)	
S903	SSG13	SW, (FM)	
S904	SSG13	SW, (MW)	
S905	SSG13	SW, (MODE)	
S906	SSG13	SW, (LOUDNESS)	
S907	SSG13	SW, (No9)	
S908	SSG13	SW, (No0)	
S909	SSG13	SW, (MEMORY)	
S910	SSG13	SW, (MEMORY SCAN)	
S911	SSG13	SW, (VIDEO)	
S912	SSG13	SW, (No5)	
S913	SSG13	SW, (No6)	
S914	SSG13	SW, (No7)	
S915	SSG13	SW, (No8)	

Ref. No.	Part No.	Part Name & Description	Remarks
S916	SSG13	SW, (CD)	
S917	SSG13	SW, (TAPE)	
S918	SSG13	SW, (No1)	
S919	SSG13	SW, (No2)	
S920	SSG13	SW, (No3)	
S921	SSG13	SW, (No4)	
S922	SSG13	SW, PHONO	

Ref. No.	Part No.	Part Name & Description	Remarks
S923	SSG13	SW, TUNER	
S924	SSG13	SW, POWER	
S925	SSG13	SW, LW	
		RELAY	
RLY701	SSY134	RELAY	

Ref. No.	Part No.	Part Name & Description	Remarks
		CABINET AND CHASSIS	
1	SFDAB31E01	POWER CORD	(E) ⚠
1	SFDAB31G01	POWER CORD	(EB) ⚠
1	SJA190	POWER CORD	(GN) ⚠
2	SBN1132	KNOB, EDITING	
3	SBC1068	BUTTON, TUNING	Ⓜ
4	SBC1069-1	BUTTON, TUNING PRESET	Ⓜ
5	SBC1070	BUTTON, BAND SELECTOR	Ⓜ
6	SBC1072	BUTTON, CASSETTE	Ⓜ
7	SBC1077	BUTTON, INPUT SELECTOR	Ⓜ
8	SBC1076	BUTTON, POWER	Ⓜ
9	RBD248YAB-0	KNOB, GEQ BALANCE	Ⓜ
10	SBN1254	KNOB, MAIN VOLUME	Ⓜ
11	SBC1074	BUTTON, SUPER BASS	Ⓜ
12	SBC1075	BUTTON, MEMORY SCAN	Ⓜ
13	RFKHAHM35LEK	REAR PANEL ASS'Y	(E) Ⓜ
13	RGR0065	REAR PANEL	(EB, GN) Ⓜ
14	RFKGAHM35LEK	FRONT PANEL ASS'Y	Ⓜ
15	SHR129	SPACER, POWER CORD	(EB)
15	SHR127	SPACER, POWER CORD	(E, GN)
16	SHR301	CLAMPER	
17	SHS3276	FOOT	Ⓜ
18	SKM7840U	SIDE PANEL (L)	Ⓜ
19	SKM7840-2U	SIDE PANEL (R)	Ⓜ
20	RKU0016	BOTTOM BOARD	Ⓜ
21	SMQ30030	DAMPER ANGLE(L)	
22	SMQ4096	DAMPER GEAR	
23	SMQ60028	SPRING	Ⓜ
24	SUW3144-2	REAR ANGLE	Ⓜ
25	SUX102	SHAFT	Ⓜ
26	SUW3145	SIDE CABI. ANGLE	Ⓜ
27	SJJ138	JACK, HEADPHONES	
28	SJJ139B	JACK, CD REMOTE	Ⓜ
29	SJF3071NJ	TERMINAL, INPUT	
30	SUW3007-1	LOOP ANT. ANGLE	
31	SGL271	PANEL LIGHT	Ⓜ
32	SGL270	PANEL LIGHT	Ⓜ
33	RFKLGHM30LAK	CASSETTE LID ASS'Y	Ⓜ
34	RFKLGHM30LBK	CASSETTE LID ASS'Y	Ⓜ
35	SDU371	FL FILTER	Ⓜ
36	SHR9094	LATCH	
38	SJF5406	TERMINAL, SPEAKER	
39	SMC1314	GEQ SHIELD PLATE	Ⓜ
40	W3FCK10FF	FLAT CABLE (J401)	Ⓜ

Ref. No.	Part No.	Part Name & Description	Remarks
41	W2FCK12FF	FLAT CABLE (J501)	Ⓜ
42	W5FCK26FF	FLAT CABLE (J601)	Ⓜ
43	W5FCK17FR	FLAT CABLE (J701)	Ⓜ
44	W7FCK17FR	FLAT CABLE (J703)	Ⓜ
45	SMN2106	FL HOLDER	Ⓜ
46	SMC1315	UCOM SHIELD PLATE	Ⓜ
47	RMA0243	ANGLE, P.T.	Ⓜ
48	RMZ0076	SPACER	Ⓜ
49	SNE1005	ERATH TERMINAL	Ⓜ
50	SHR8016	INSULATION SHEET	Ⓜ
51	SMC6482	FL SHIELD PLATE	Ⓜ
52	SMQ30056	DAMPER ANGLE(R)	Ⓜ
53	SJF4317	TERMINAL, ANTENNA	
55	SJS208	TERMINAL, LOOP ANTENNA	
56	RJF282A	FUSE CLIP	
57	SMC6481	REMOTE SENSOR SHIELD PLATE	Ⓜ
58	RYK0084	TOP BOARD	Ⓜ
59	SJS804	SOCKET	
60	RMR0225	HEAT SINK SUPPORT	Ⓜ
61	SHR411	LATCH	
62	SJS5811	CONNECTOR(8P)	
62	SJS5523	CONNECTOR(5P)	
62	SJS5331	CONNECTOR(3P)	
63	SJT783	PIN	
64	SUW3066	BRACKET, HEAT SINK	Ⓜ
J301	SJT3319	CONNECTOR(3P)	
J302	SJT3511	CONNECTOR(5P)	
J402	SJT3809	CONNECTOR(8P)	
J701	SJT30543V	CONNECTOR(5P)	Ⓜ
J703	SJT30743V	CONNECTOR(7P)	Ⓜ
J901A	SJT30747WL	CONNECTOR(7P)	
J901B	SJS50780WL	SOCKET(7P)	
J902A	SJT30747WL	CONNECTOR(7P)	
J902B	SJS50780WL	SOCKET(7P)	
J903A	SJT31047WL	CONNECTOR(10P)	
J903B	SJS51080WL	SOCKET(10P)	
J904A	SJT31047WL	CONNECTOR(10P)	
J904B	SJS51080WL	SOCKET(10P)	
		SCREWS, NUTS AND WASHERS	
N1	SNE2120	NUT, DAMPER GEAR	
N2	SNE4060	U NUT	
N3	XTB3+8J	SCREW	
N4	XTB3+10G	SCREW	
N5	XTB3+10GFR	SCREW	

Ref. No.	Part No.	Part Name & Description	Remarks
N6	XTB4+8F	SCREW	
N7	XTB4+12JFZ	SCREW	
N8	XTW3+8T	SCREW	
N9	XTW3+10T	SCREW	
N10	XTWS3+10Q	SCREW	
N11	XNS7B	SCREW	
N12	XTBS3+8JFZ1	SCREW	
		MECHANISM PARTS LIST	
101	RFU154ZA	CHASSIS (DECK1)	
102	RFY905ZA	SWITCH PLATE	M
103	RFY906ZA	SWITCH PLATE	M
104	RFY868ZA	LEVER (DECK2)	
105	RFY869ZA	LEVER	
106	RFY870ZA	LEVER	
107	RFY871ZA	FF BUTTON LEVER	
108	RFY872ZA	LEVER (DECK1)	
109	RFY907ZA	LEVER (DECK2)	M
110	RFS837ZA	SPRING (DECK2)	
111	RFY908ZA	LEVER (DECK2)	M
112	RFS813ZA	COIL SPRING (DECK2)	
113	RFX174ZA	SPACER (DECK2)	
114	RFS814ZA	COIL SPRING	
115	RFU155ZA	CHASSIS	
116	RFS815ZA	COIL SPRING	
117	RFS816ZA	COIL SPRING	
119	RFY844ZA	LEVER (DECK1)	
120	RFX175ZA	SPACER	
121	RFS817ZA	COIL SPRING (DECK2)	
122	RFS818ZA	COIL SPRING (DECK2)	
124	RFS842ZA	SPRING (DECK1)	M
125	RFU157ZA	CHASSIS (DECK1)	
126	RFU175ZA	CHASSIS (DECK2)	M
127	RFU168ZA	CHASSIS (DECK1)	
128	RFU167ZA	HEAD PANEL (DECK2)	
129	RFS830ZA	SPRING	
130	RFS820ZA	COIL SPRING	
133	RFS578ZA	SPRING (DECK2)	
134	RFS447Z	AZMUTH SPRING	
135	RFR57ZA	ROLLER	
136	RFY909ZA	REC ARM (DECK2)	M
138	RFY884ZA	LEVER	
139	RFQ61ZA	PULLEY	
140	RFB99ZA	BELT	
143	RFF70ZA	FLYWHEEL ASS'Y (DECK1)	M
144	RFF71ZA	FLYWHEEL ASS'Y (DECK2)	M
145	RFS822ZA	COIL SPRING	
146	RFY874ZA	LEVER	
147	RFG136ZA	GEAR	
149	RFG110ZA	GEAR	
150	RFS708ZA	COIL SPRING	

Ref. No.	Part No.	Part Name & Description	Remarks
151	RFJ89ZA	REEL ASS'Y	M
152	RFJ90ZA	REEL ASS'Y	M
153	RFY875ZA	LEVER	
155	RFD404ZA	MOTOR BRACKET	M
156	RFI27ZA	MOTOR RUBBER	
157	RFE213ZA	SCREW	
159	RFB102ZA	MAIN BELT	M
160	RFI55ZA	RUBBER SPACER	
161	RFI56ZA	RUBBER SPACER	
162	RFY889ZA	LEVER	
164	RFS467ZA	SPRING	
165	RFH21ZA	P HEAD (DECK1)	M
166	RFH22ZA	R/P HEAD (DECK2)	M
167	RFH23ZA	E HEAD (DECK2)	M
169	RFY716ZA	LEVER (DECK2)	
170	RFE475ZA	SCREW (DECK2)	
171	XTN2+3B	SCREW	
172	XTN2+4B	SCREW	
173	XSN2+4	SCREW	
174	RFE496ZA	SCREW	
175	XSN2+6	SCREW (DECK1)	
176	RFE506ZA	SCREW (DECK2)	M
177	RFE498ZA	SCREW	
178	RFE230ZA	SCREW	
179	RFE454ZA	SCREW	
183	RFN83ZA	WASHER	
184	RFN214ZA	WASHER	
185	RFN122ZA	WASHER	
186	RFE228ZA	TERMINAL	
187	RFY877ZA	COLLER (DECK2)	
188	RFD396ZA	CHASSIS (DECK2)	
189	RFE497ZA	SCREW (DECK2)	
190	RFE453ZA	SCREW	
191	RFY910ZA	LEVER	M
192	RFY911ZA	LEVER	M
193	RFE239ZA	SCREW	
194	RFX134ZA	COLLER	
195	RFS687ZA	SPRING	
197	RFM162ZA	MOTOR ASS'Y	M
199	SWKGH30P2	LEAD WIRE (DECK2)	M
200	SWKGH30P3	LEAD WIRE (DECK1)	M
201	RFY924ZA	LEVER (DECK2)	M
202	RFY925ZA	LEVER (DECK2)	M
203	RFU178ZA	CHASSIS (DECK2)	
		PACKING MATERIAL (SG-HM35L)	
P1	RPG0338	CARTON BOX	M
P2	SPS5314	PAD (UNDER FRONT)	M
P3	SPS5315	PAD (UNDER REAR)	M
P4	RPN0236A	PAD (TOP FRONT)	M
P5	RPN0236B	PAD (TOP REAR)	M

Ref. No.	Part No.	Part Name & Description	Remarks
P6	RPN0236C	PAD (PLAYER FRONT)	M SL-HM50B
P7	RPN0236D	PAD (PLAYER REAR)	M SL-HM50B
P8	SPS5136	PAD (T.T SHEET)	M SL-HM50B
P9	SPS5084	REMOTE CONTROL BOX	M
P10	SPP761	PROTECTION COVER	M
P11	RPH0040	SHEET (PLAYER)	M SL-HM50B
P12	SHE154	ARM BAND	SL-HM50B
P13	XZB28X35A01	POLY SHEET	M SL-HM50B
P14	SPP746	PROTECTION BAG (DUST COVER)	M SL-HM50B
		ACCESSORIES (SG-HM35L)	
A1	RQT0523-B	INSTRUCTION MANUAL	(EB, GN) M
A1	RFKSAHM35LEK	INSTRUCTION MANUAL ASS'Y	(E) M
A2	RQA0013	WARRANTY CARD	(E, EB)
A2	SQX7186	WARRANTY CARD	(GN)
A3	SQX9049	SERVICENTER LIST	
A4	SBH9383	DUST COVER HINGE	SL-HM50B
A5	SJY4076	PLATTER MAT	M SL-HM50B
A6	SJY5018-1	EP ADAPTOR	SL-HM50B
A7	SSA269	FM ANTENNA	
A8	SPB1163	LOOP ANTENNA	M
A9	EUR64874	REMOTE-CONTROL TRANSMITTER	M
A10	UR64EC121	BATTERY COVER	
A11	SYE1130	DUST COVER	M SL-HM50B

■ EXPLODED VIEWS

- **Cabinet and chassis**

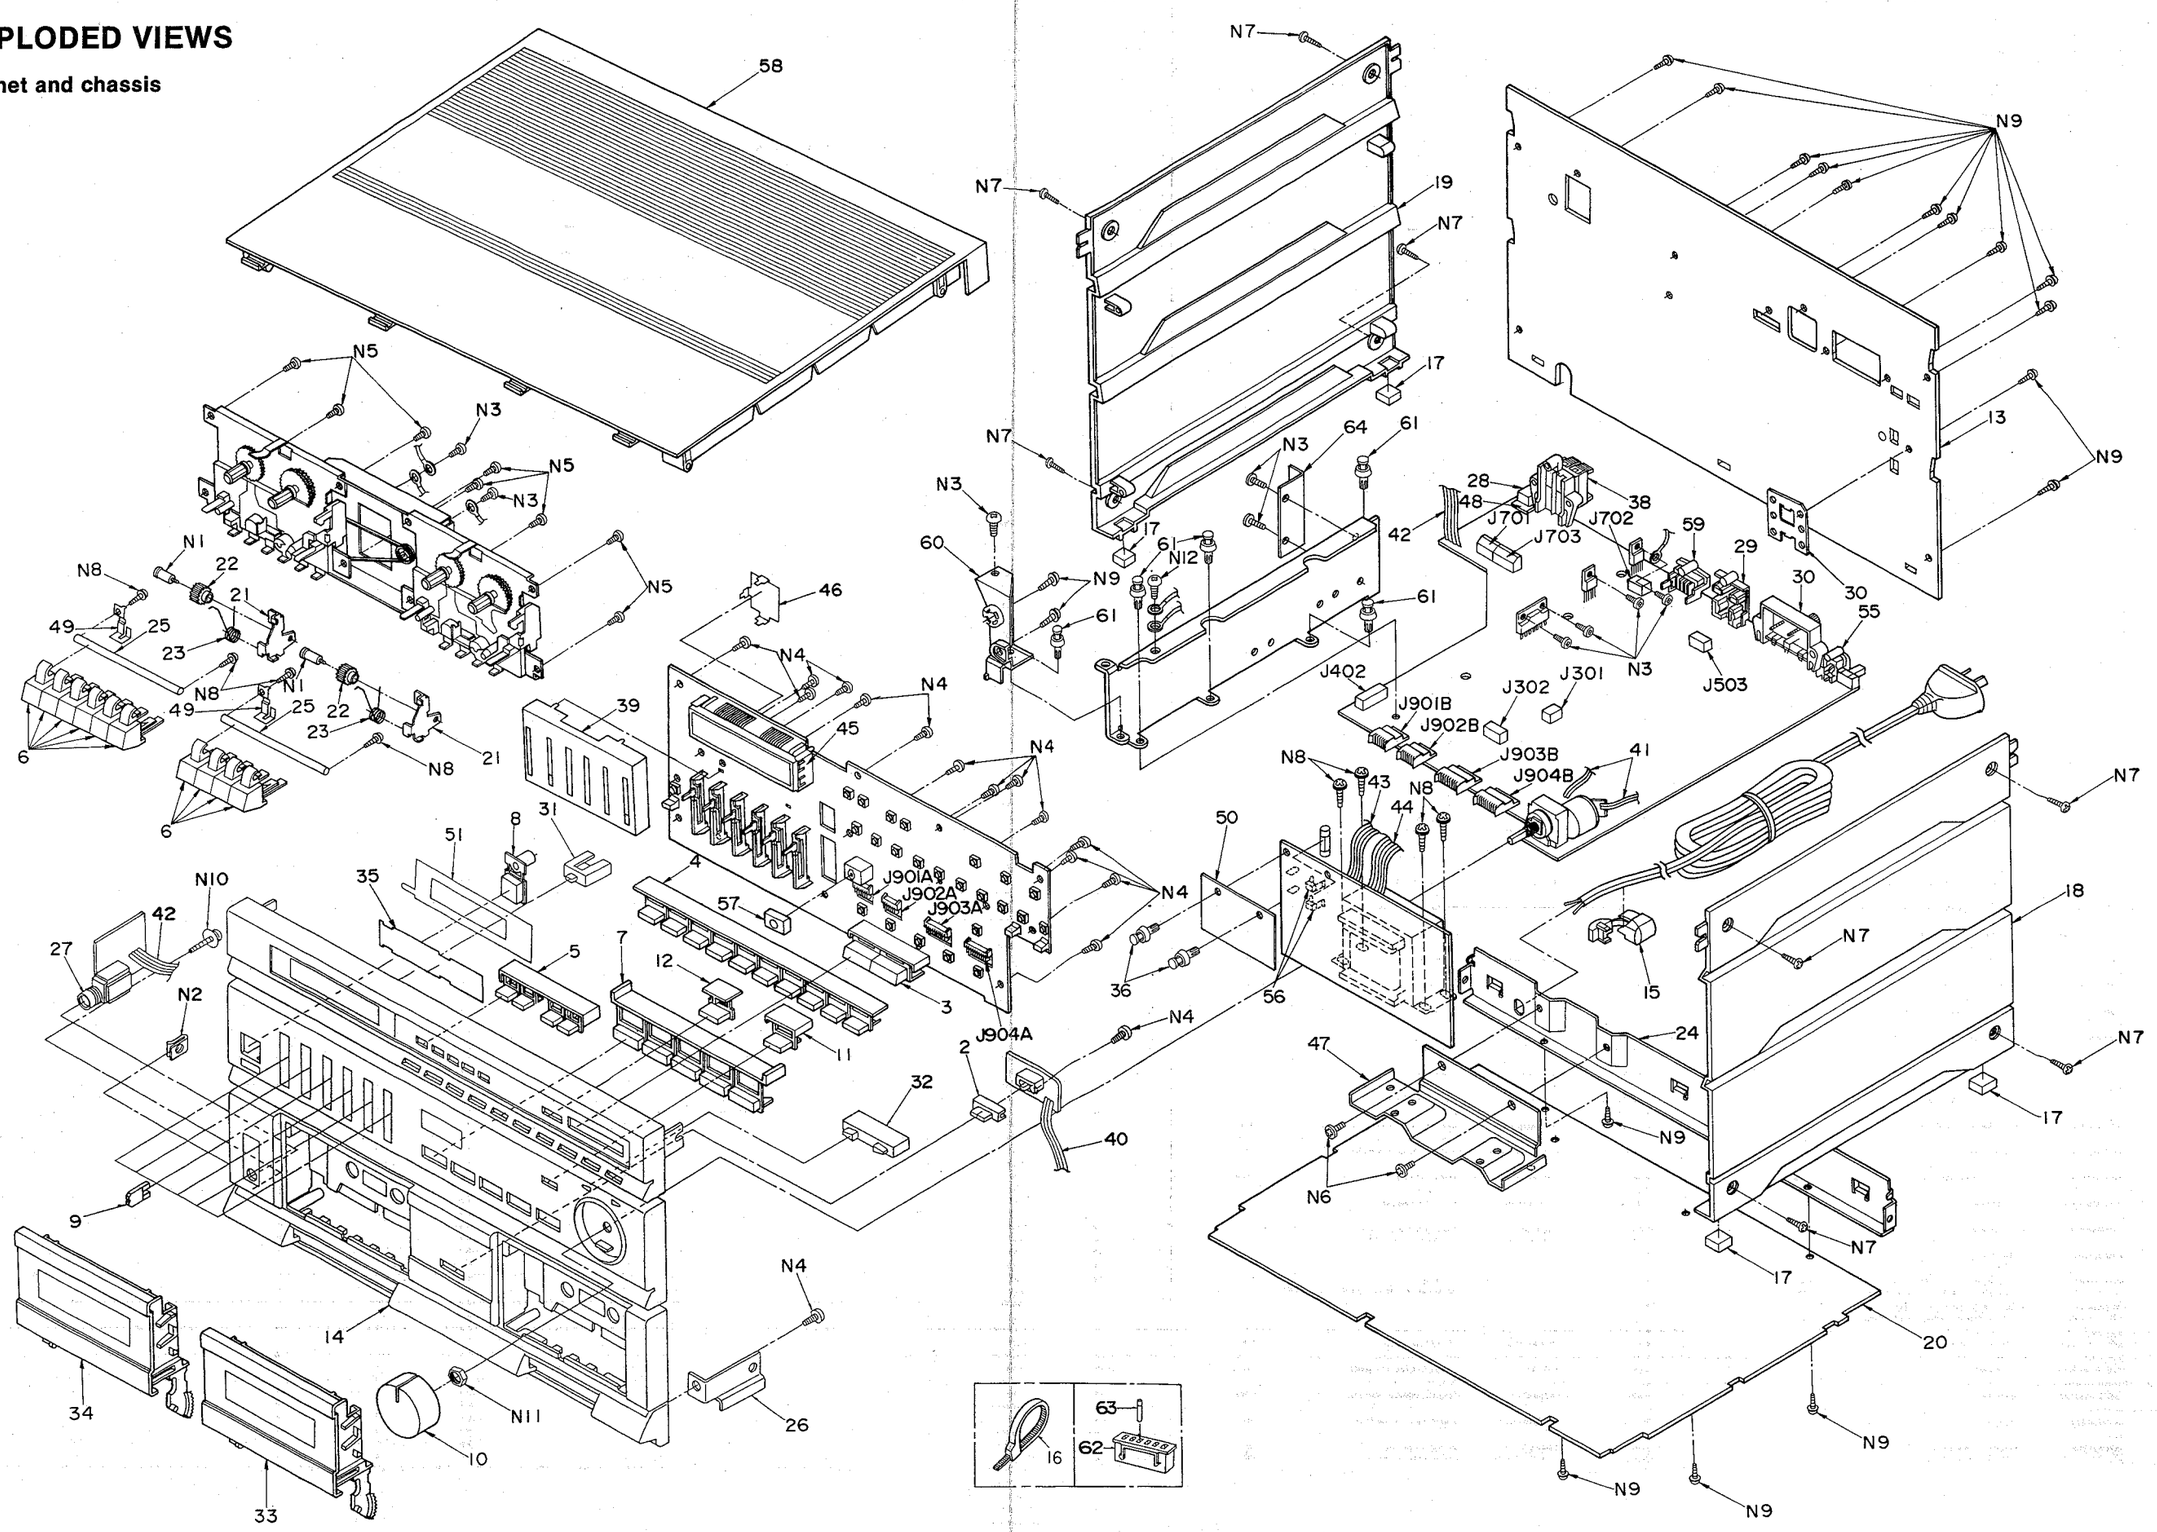

• **Cassette deck**

<DECK 1>

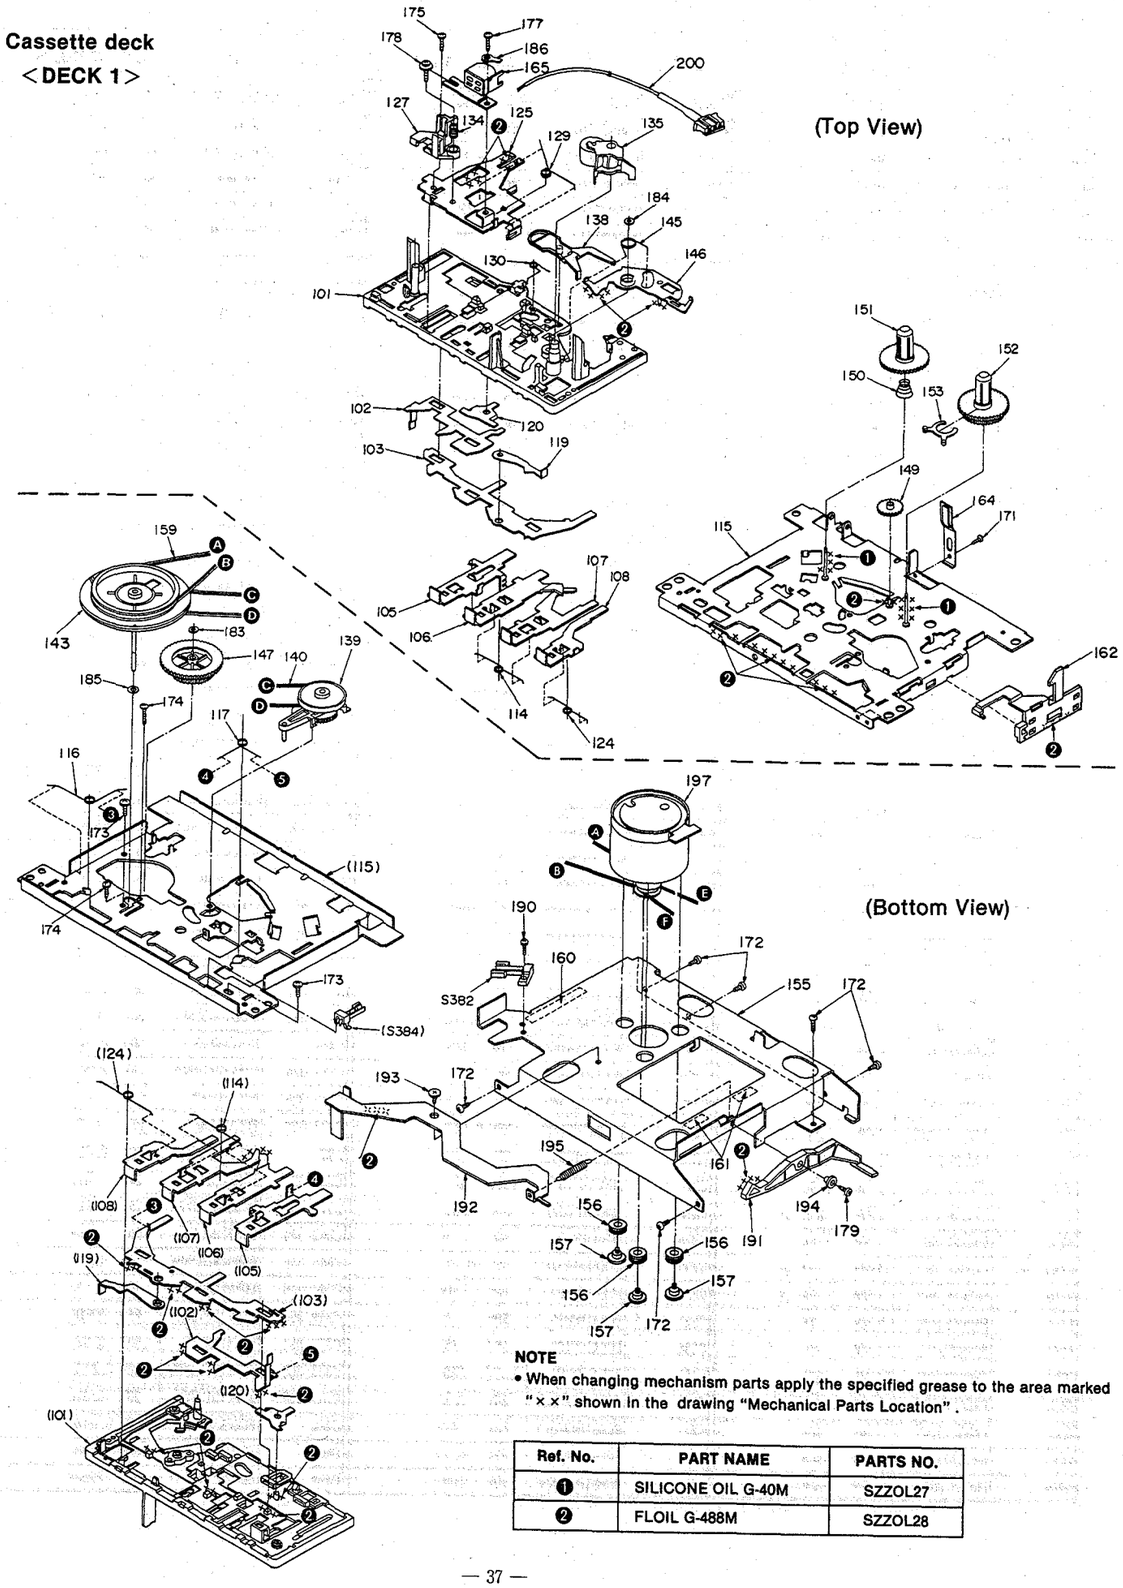

NOTE

• When changing mechanism parts apply the specified grease to the area marked "× ×" shown in the drawing "Mechanical Parts Location".

Ref. No.	PART NAME	PARTS NO.
❶	SILICONE OIL G-40M	SZZOL27
❷	FLOIL G-488M	SZZOL28

<DECK 2>

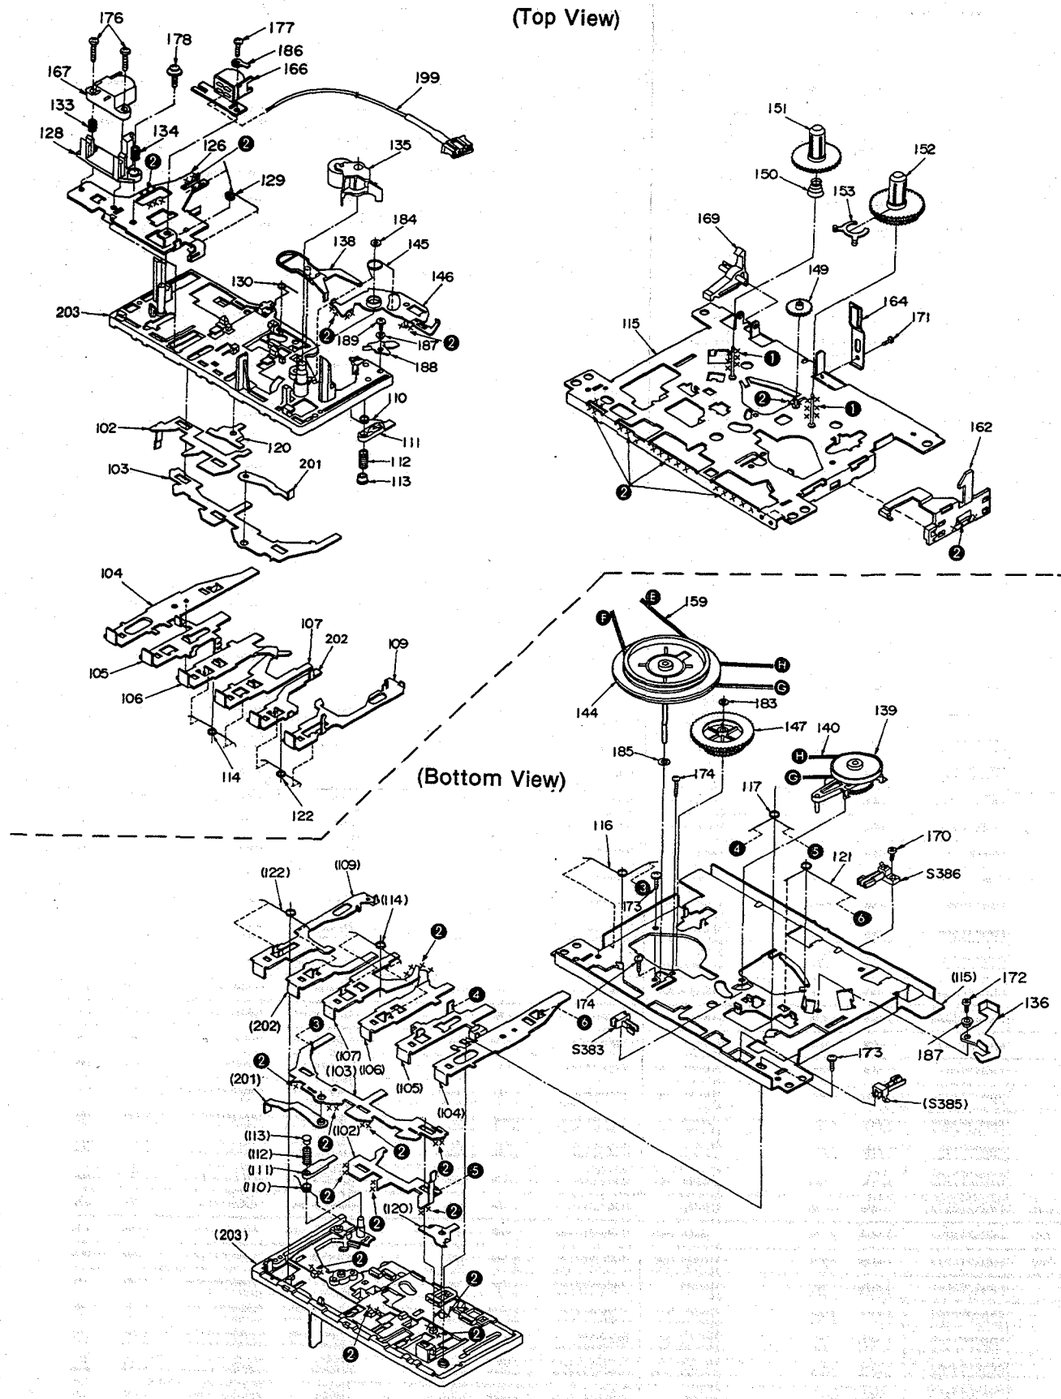

■ RESISTORS & CAPACITORS

Notes : * Capacity valuse are in microfarads (uF) unless specified otherwise, P=Pico-farads (pF) F=Farads (F)
* Resistance values are in ohms, unless specified otherwise, 1K=1,000 (OHM) , 1M=1,000k (OHM)

Ref. No.	Part No.	Values & Remarks
		RESISTORS
R1	ERDS2TJ104	1/4W 100K
R2	ERDS2TJ470	1/4W 27
R3	ERDS2TJ104	1/4W 100K
R4	ERDS2TJ824	1/4W 820K
R5	ERDS2TJ391	1/4W 390
R6	ERDS2TJ104	1/4W 100K
R7	ERDS2TJ684	1/4W 680K
R8	ERDS2TJ122	1/4W 1.2K
R9	ERDS2TJ224	1/4W 220K
R10	ERDS2TJ391	1/4W 390
R11	ERDS2TJ272	1/4W 2.7K
R12	ERDS2TJ391	1/4W 390
R201	ERDS2TJ102	1/4W 1K
R202	ERDS2TJ824	1/4W 820K
R203	ERDS2TJ122	1/4W 1.2K
R204	ERDS2TJ824	1/4W 820K
R205	ERDS2TJ391	1/4W 390
R211	ERDS2TJ472	1/4W 4.7K
R212	ERDS2TJ104	1/4W 100K
R213	ERDS2TJ102	1/4W 1K
R214	ERDS2TJ122	1/4W 1.2K
R215	ERDS2TJ822	1/4W 8.2K
R219	ERDS2TJ562	1/4W 5.6K
R220	ERDS2TJ222	1/4W 2.2K
R221	ERDS2TJ102	1/4W 1K
R232	ERDS2TJ153	1/4W 15K
R233	ERDS2TJ561	1/4W 560
R234	ERDS2TJ822	1/4W 8.2K
R235	ERDS2TJ471	1/4W 470
R236	ERDS2TJ102	1/4W 1K
R237	ERDS2TJ332T	1/4W 33K
R244	ERDS2TJ103	1/4W 10K
R246	ERDS2TJ153	1/4W 150K
R249	ERDS2TJ104	1/4W 100K
R252	ERDS2TJ472	1/4W 4.7K
R253	ERDS2TJ224	1/4W 220K
R254	ERDS2TJ103	1/4W 10K
R257, 258	ERDS2TJ332T	1/4W 3.3K
R259, 260	ERDS2TJ272	1/4W 2.7K
R261, 262	ERDS2TJ273	1/4W 27K
R270	ERDS2TJ391	1/4W 390
R271	ERDS2TJ104	1/4W 100K
R272	ERDS2TJ103	1/4W 10K
R273	ERDS2TJ104	1/4W 100K
R274	ERDS2TJ824	1/4W 820K
R275	ERDS2TJ471	1/4W 470
R276	ERDS2TJ822	1/4W 8.2K
R277	ERDS2TJ333	1/4W 33K
R278	ERDS2TJ104	1/4W 100K
R279	ERDS2TJ122	1/4W 1.2K
R280	ERDS2TJ222	1/4W 2.2K
R281	ERDS2TJ103	1/4W 10K
R282	ERDS2TJ104	1/4W 100K
R283	ERDS2TJ103	1/4W 10K
R284	ERDS2TJ470	1/4W 47
R285	ERDS2TJ103	1/4W 10K
R286	ERDS2TJ684	1/4W 680K
R287, 288	ERDS2TJ102	1/4W 1K
R289	ERDS2TJ471	1/4W 470
R290	ERDS2TJ103	1/4W 10K
R291	ERDS2TJ470	1/4W 47
R292	ERDS2TJ102	1/4W 1K
R293	ERDS2TJ103	1/4W 10K
R294	ERDS2TJ222	1/4W 2.2K
R295	ERDS2TJ103	1/4W 10K
R296	ERDS2TJ472	1/4W 4.7K
R297	ERDS2TJ223	1/4W 22K
R298	ERDS2TJ103	1/4W 10K
R299	ERDS2TJ473	1/4W 47K
R301, 302	ERDS2TJ101	1/4W 100
R303, 304	ERDS2TJ104	1/4W 100K
R307, 308	ERDS2TJ394	1/4W 390K
R309, 310	ERDS2TJ163	1/4W 16K
R313, 314	ERDS2TJ820	1/4W 82
R317, 318	ERDS2TJ472	1/4W 4.7K
R319, 320	ERDS2TJ221	1/4W 220
R321, 322	ERDS2TJ103	1/4W 10K
R323, 324	ERDS2TJ472	1/4W 4.7K
R325, 326	ERDS2TJ224	1/4W 220K
R329	ERDS2TJ223	1/4W 22K
R330	ERDS2TJ473	1/4W 47K
R331-334	ERDS2TJ101	1/4W 100
R335, 336	ERDS2TJ225	1/4W 2.2M
R337, 338	ERDS2TJ224	1/4W 220K
R340	ERDS2TJ224	1/4W 220K
R341, 342	ERDS2TJ103	1/4W 10K
R343	ERDS2TJ473	1/4W 47K
R345, 346	ERDS2TJ394	1/4W 390K
R347, 348	ERDS2TJ163	1/4W 16K
R349	ERDS2TJ102	1/4W 1K
R351, 352	ERDS2TJ820	1/4W 82
R353, 354	ERDS2TJ472	1/4W 4.7K
R355, 356	ERDS2TJ103	1/4W 10K
R357	ERDS2TJ473	1/4W 47K
R358	ERDS2TJ102	1/4W 1K
R359, 360	ERDS2TJ221	1/4W 220
R361-364	ERDS2TJ223	1/4W 22K
R365, 366	ERDS2TJ332T	1/4W 3.3K
R371, 372	ERDS2TJ103	1/4W 10K
R373, 374	ERDS2TJ155	1/4W 1.5M
R377, 378	ERDS2TJ123	1/4W 12K
R379, 380	ERDS2TJ273	1/4W 27K
R381, 382	ERDS2TJ682	1/4W 6.8K
R383, 384	ERDS2TJ562	1/4W 5.6K
R385, 386	ERDS2TJ560	1/4W 56
R387, 388	ERDS2TJ821	1/4W 820
R389, 393	ERDS2TJ472	1/4W 4.7K
R394	ERDS2TJ122	1/4W 1.2K
R399, 400	ERDS2TJ822	1/4W 8.2K
R401	ERDS2TJ1R0	1/4W 1
R403	ERDS2TJ100	1/4W 10
R404	ERDS2TJ562	1/4W 5.6K
R405	ERDS2TJ100	1/4W 10
R406	ERDS2TJ152	1/4W 1.5K
R407	ERDS2TJ151	1/4W 150
R408	ERDS2TJ681	1/4W 680
R446, 447	ERDS2TJ103	1/4W 10K
R448, 449	ERDS2TJ472	1/4W 4.7K
R450	ERDS2TJ104	1/4W 100K
R451	ERDS2TJ473	1/4W 47K
R452	ERDS2TJ103	1/4W 10K
R453	ERDS2TJ183	1/4W 18K
R454	ERDS2TJ562	1/4W 5.6K
R455	ERDS2TJ102	1/4W 1K
R456	ERDS2TJ222	1/4W 2.2K
R498	ERDS2TJ472	1/4W 4.7K
R501, 502	ERDS2TJ123	1/4W 12K
R503, 504	ERDS2TJ331	1/4W 330
R521, 522	ERDS2TJ123	1/4W 12K
R523, 524	ERDS2TJ471	1/4W 470
R525, 526	ERDS2TJ183	1/4W 18K
R527, 528	ERDS2TJ391	1/4W 390
R531, 532	ERDS2TJ151	1/4W 150
R533-535	ERDS2TJ103	1/4W 10K
R539, 540	ERDS2TJ224	1/4W 220K
R541, 542	ERDS2TJ821	1/4W 820
R543, 544	ERDS2TJ103	1/4W 10K
R549, 550	ERDS2TJ104	1/4W 100K
R551, 552	ERDS2TJ102	1/4W 1K
R561, 562	ERDS2TJ472	1/4W 4.7K
R563, 564	ERDS2TJ103	1/4W 10K
R565	ERDS2TJ223	1/4W 22K
R566	ERDS2TJ153	1/4W 15K
R568	ERDS1FVJ100	1/2W 10 ⚠

Ref. No.	Part No.	Values & Remarks
R593-596	ERDS2TJ331	1/4W 330
R597, 598	ERDS2TJ472	1/4W 4.7K
R599	ERDS2TJ102	1/4W 1K
R601, 602	ERDS2TJ102	1/4W 1K
R605	ERDS2TJ223	1/4W 22K
R606	ERDS2TJ223	1/4W 22K
R607, 608	ERDS2TJ2R2	1/4W 2.2
R631, 632	ERDS2TJ271	1/4W 270
R651, 652	ERDS2TJ102	1/4W 1K
R653, 654	ERDS2TJ471	1/4W 470
R655, 656	ERDS2TJ222	1/4W 2.2K
R659, 660	ERDS2TJ103	1/4W 10K
R663, 664	ERDS2TJ224	1/4W 220K
R665, 666	ERDS2TJ122	1/4W 1.2K
R667	ERDS2TJ472	1/4W 4.7K
R669	ERDS2TJ224	1/4W 220K
R670	ERDS2TJ563	1/4W 56K
R671	ERDS2TJ472	1/4W 4.7K
R707	ERDS1FJ122	1/2W 1.2K ⚠
R708	ERDS1FJ331	1/2W 330 ⚠
R712	ERDS1FJ1R0	1/2W 1 ⚠
R713	ERD2FCG4R7P	1/4W 4.7 ⚠
R717	ERDS1FJ122	1/2W 1.2K ⚠
R718	ERDS1FJ331	1/2W 330 ⚠
R719	ERDS1FVJ1R0T	1/2W 1 ⚠
R720	ERDS2TJ100	1/4W 10
R721	ERDS2TJ153	1/4W 15K
R722	ERDS2TJ182	1/4W 1.8K
R726	ERDS1FJ680	1/2W 68 ⚠
R727	ERDS2TJ562	1/4W 5.6K
R728	ERDS2TJ153	1/4W 15K
R729, 730	ERDS1FJ680	1/2W 68 ⚠
R732	ERDS1FJ152	1/2W 1.5K ⚠
R736	ERDS1FJ820	1/2W 82 ⚠
R738	ERDS2TJ222	1/4W 2.2K
R739	ERDS2TJ332T	1/4W 3.3K
R741	ERDS1FJ221	1/2W 220 ⚠
R743	ERDS1FJ221	1/2W 220 ⚠
R744	ERDS1FVJ101T	1/2W 100 ⚠
R745	ERDS2TJ221	1/4W 220
R746	ERDS2TJ562	1/4W 5.6K
R752	ERD25FJ2R2	1/4W 2.2 ⚠
R753	ERDS2TJ562	1/4W 5.6K
R754, 755	ERDS1FJ820	1/2W 82 ⚠
R758	ERDS1FJ152	1/2W 1.5K ⚠
R901	ERDS2TJ102	1/4W 1K
R902	ERDS2TJ105	1/4W 1M
R903	ERDS2TJ563	1/4W 56K
R904	ERDS2TJ123	1/4W 12K
R905	ERDS2TJ103	1/4W 10K
R906	ERDS2TJ394	1/4W 390K
R907	ERDS2TJ681	1/4W 680
R908	ERDS2TJ104	1/4W 100K
R909	ERDS2TJ102	1/4W 1K
R910	ERDS2TJ222	1/4W 2.2K
R911	ERDS2TJ103	1/4W 10K
R912	ERDS2TJ331	1/4W 330
R913, 914	ERDS2TJ101	1/4W 100
R916-919	ERDS2TJ103	1/4W 10K
R920	ERDS2TJ562	1/4W 5.6K
R922	ERDS2TJ122	1/4W 1.2K
R923, 924	ERDS2TJ103	1/4W 10K
R925, 926	ERDS2TJ821	1/4W 820
R927	ERDS2TJ104	1/4W 100K
R928, 929	ERDS2TJ103	1/4W 10K
R930-935	ERDS2TJ331	1/4W 330
R936	ERDS2TJ222	1/4W 1.2K
R937	ERDS2TJ103	1/4W 10K
R938	ERDS2TJ104	1/4W 100K
R939-942	ERDS2TJ103	1/4W 10K
R997	ERDS2TJ103	1/4W 10K
R998	ERDS2TJ472	1/4W 4.7K
R999	ERDS2TJ221	1/4W 220
		CAPACITORS
C1	RCBS1H102KBY	50V 1000P
C2-4	RCBS1H3R3KCY	50V 3.3P
C5	RCBS1H180JLY	50V 18P
C6	RCBS1H181KBY	50V 180P
C7	RCBS1H1R0MCY	50V 1P
C8	RCBS1H5R6KCY	50V 5.6P
C9	RCBS1H102KBY	50V 1000P
C10	RCBS1H3R3KCY	50V 3.3P
C11	RCBS1H180JCY	50V 18P
C12	RCBS1H6R8KCY	50V 6.8P
C201, 202	ECKT1H103ZF	50V 0.01U
C204	RCBS1H181KBY	50V 180P
C205	ECKT1H103ZF	50V 0.01U
C206	ECFT1C104MD	16V 0.1U
C212	ECFT1E473KDY	25V 0.047U
C213	RCBS1H180JCY	50V 18P
C214	ECQP1471JZT	100V 470P
C218	ECKT1H103ZF	50V 0.01U
C219	ECEA50M1RB	50V 1U
C230	ECKT1H103ZF	50V 0.01U
C231	ECEA1CU100	16V 10U
C233	ECEA1HU010	50V 1U
C234	ECEA1CU100	16V 10U
C235	ECEA0JU101	6.3V 100U
C236	RCBS1H8R2KCY	50V 8.2P
C237	RCBS1H470JLY	50V 47P
C238	ECEA1EU4R7	25V 4.7U
C240	RCBS1H101KBY	50V 100P
C241	RCBS1C103MYY	16V 0.01U
C242, 243	ECKT1H223ZF	50V 0.022U
C244	RCBS1C103MYY	16V 0.01U
C246	ECEA1HUR47	50V 0.47U
C248	ECEA1EU4R7	25V 4.7U
C251	ECEA1EU4R7	25V 4.7U
C252	ECEA1HU010	50V 1U
C253	ECEA0JU101	6.3V 100U
C254	ECQP1102JZT	100V 1000P
C255	ECEA1CU100	16V 10U
C256	ECKT1H223ZF	50V 0.022U
C257, 258	ECFT1C153KDY	16V 0.015U
C259, 260	ECEA1EU4R7	25V 4.7U
C262	ECKT1H103ZF	50V 0.01U
C263	ECKT1H151KBY	50V 150P
C272	ECEA1CU330	16V 33U
C273, 274	RCBS1H150JCY	50V 15P
C276	RCBS1H102KBY	50V 1000P
C277	ECEA1CU330	16V 33U
C278	RCBS1H102KBY	50V 1000P
C279	RCBS1H181KBY	50V 180P
C280, 281	ECKT1H103ZF	50V 0.01U
C282	RCBS1H180JLY	50V 18P
C283	ECEA1HU3R3	50V 3.3U
C298	RCBS1C103MYY	16V 0.01U
C299	ECQP1391JZ	100V 390P
C301, 302	RCBS1H561KBY	50V 560P
C305, 306	ECFT1C822KDY	16V 8200P
C307, 308	ECEA1CU470	16V 47U
C309, 310	ECEA1EU4R7	25V 4.7U
C311, 312	ECEA1CU470	16V 47U
C313, 314	ECFT1C103KDY	16V 0.01U
C315	ECEA1EU4R7	25V 4.7U
C317, 318	ECKT1H122KB	50V 1200P
C319, 320	RCBS1H681KBY	50V 680P
C321	ECKT1H103ZF	50V 0.01U
C323, 324	ECFT1C822KDY	16V 8200P
C325, 326	ECEA1CU470	16V 47U
C327-329	ECEA1EU4R7	25V 4.7U
C330	ECKT1H103ZF	50V 0.01U
C331, 332	ECEA1CU470	16V 47U
C341, 342	RCBS1H820KBY	50V 82P
C343, 344	ECKT1H121KB	50V 120P
C345, 346	RCBS1H102KBY	50V 1000P
C347, 348	ECEA1HU010	50V 1U
C349, 350	ECFV1E272KAY	25V 2700P
C351, 352	ECEA1HUR33	50V 0.33U
C353-356	ECFT1C153KDY	16V 0.015U
C359, 360	ECKT1H103ZF	50V 0.01U
C402	ECQP1183JZT	100V 0.018U
C403	ECQP1472JZT	100V 4700P
C404	ECFV1E272KAY	25V 2700P

Ref. No.	Part No.	Values & Remarks
C405	ECEA1EU4R7B	25V 4.7U
C435	ECEA1CU330	16V 33U
C438	ECEA1CU101	16V 100U
C498	ECFT1C104MD	16V 0.1U
C499	ECQP1272JZ	100V 2700P
C511, 512	ECFT1E104MD	25V 0.1U
C513-515	RCBS1H470JLY	50V 47P
C521-524	ECEA1EU4R7	25V 4.7U
C525, 526	ECKT1H103ZF	50V 0.01U
C529, 530	ECFT1C333KDY	16V 0.033U
C531	ECEA1HUR33	50V 0.33U
C533	ECEA0JU101	6.3V 100U
C534	ECEA1CU100	16V 10U
C535, 536	ECEA1HUR33	50V 0.33U
C540	RCBS1H101KBY	50V 100P
C541	RCBS1H101KBY	50V 100P
C545	RCBS1H101KBY	50V 100P
C546	RCBS1H101KBY	50V 100P
C561, 562	ECEA1CK470	16V 47U
C563, 564	ECFT1E473KDY	25V 0.047U
C565, 566	ECEA1HKR68	50V 0.68U
C567, 568	ECFT1E153KDY	25V 0.015U
C569, 570	ECEA1HKR22	50V 0.22U
C571, 572	ECFT1E472KDY	25V 4700P
C573, 574	ECFT1E333KDD	25V 0.033U
C575, 576	ECKT1H152KB	50V 1500P
C577, 578	ECFT1E223KDY	25V 0.022U
C579, 580	RCBS1H561KBY	50V 560P
C581, 582	ECFT1E822KDY	25V 8200P
C583, 584	RCBS1C152MXY	16V 1500P
C585-588	ECEA1EK4R7	25V 4.7U
C589, 590	ECEA1CKS100	16V 10U
C591, 592	ECFT1E333KDD	25V 0.033U
C597, 598	RCBS1H181KBY	50V 180P
C599	ECFT1E392KDY	25V 3900P
C601, 602	ECEA1HU010B	50V 1U
C603, 604	RCBS1H102KBY	50V 1000P
C605, 606	ECEA1EU470	25V 47U
C607, 608	ECEA1EU470	25V 47U
C609, 610	ECEA1EU102	25V 1000U
C613, 614	ECQV1H124JZ3	50V 0.12U
C651, 652	ECEA1HU010	50V 1U
C653, 654	RCBS1H681KBY	50V 680P
C655, 656	ECEA1CU100	16V 10U
C661, 662	ECKT1H103ZF	50V 0.01U
C666	ECEA0JU101	6.3V 100U
C707-710	ECKT1H103ZF	50V 0.01U
C712	ECETS45V472	45V 4700U
C713	ECKT1H682KB	50V 6800P
C714	ECEA1CU101	16V 100U
C718-721	ECEA1CU101	16V 100U
C723	ECKT1H682KB	50V 6800P

Ref. No.	Part No.	Values & Remarks
C724	ECEA1CU470	16V 47U
C725	ECEA1CU101	16V 100U
C727	ECKR2H103ZU	500V 0.01U
C728	ECKT1H682KB	50V 6800P
C729	ECEA1CU101	16V 100U
C730	ECEA1CU100	16V 10U
C731	ECEA1CU101	16V 100U
C732	ECEA1HU331B	50V 330U
C733	ECEA1VU100	35V 10U
C735	ECKR2H103ZU	500V 0.01U
C736	ECEA1HU102	50V 1000U
C737	ECEA1CU330	16V 33U
C739	ECKT1H682KB	50V 6800P
C740	ECEA1AU101	10V 100U
C741	ECEA1CU100	16V 10U
C742-745	ECKR2H103ZU	500V 0.01U
C746	ECEA1CU100	16V 10U
C747	ECKT1H682KB	50V 6800P
C748	ECEA1HU102	50V 1000U
C750	ECQM1104KZW	100V 0.1U
C751	ECQM1H473KV3	50V 0.047U
C752	ECFT1C104MD	16V 0.1U
C753	ECFD1H104MDY	50V 0.1U
C755	RCBS1H331KBY	50V 330P
C756	RCBS1H331KBY	50V 330P
C901, 902	ECEA0JU102B	6.3V 1000U
C903	ECEA1HU010	50V 1U
C904	ECEA0JU101	6.3V 100U
C905	RCBS1H331KBY	50V 330P
C907	ECEA0JK221B	6.3V 220U
C908	RCBS1C103MYY	16V 0.01U
C910	RCBS1C103MYY	16V 0.01U
C911-913	ECEA1HK3R3	50V 3.3U
C914	ECEA1VK100B	35V 10U
C915	ECKT1H103ZF	50V 0.01U
C916	ECEA0JU102	6.3V 1000U
C917, 918	RCBS1H102KBY	50V 1000P
C919, 920	RCBS1C103MYY	16V 0.01U
C922	RCBS1H331KBY	50V 330P
C923	ECQV1H105JZ	50V 1U
C924	RCBS1H331KBY	50V 330P
C991	RCBS1C103MYY	16V 0.01U
C992	RCBS1H101KBY	50V 100P
C993	RCBS1C103MYY	16V 0.01U
C994	RCBS1H101KBY	50V 100P
C996	RCBS1C103MYY	16V 0.01U
C997	RCBS1C103MYY	16V 0.01U
C998	RCBS1H101KBY	50V 100P
C999	RCBS1H101KBY	50V 100P

■ PACKING (SG-HM35L)

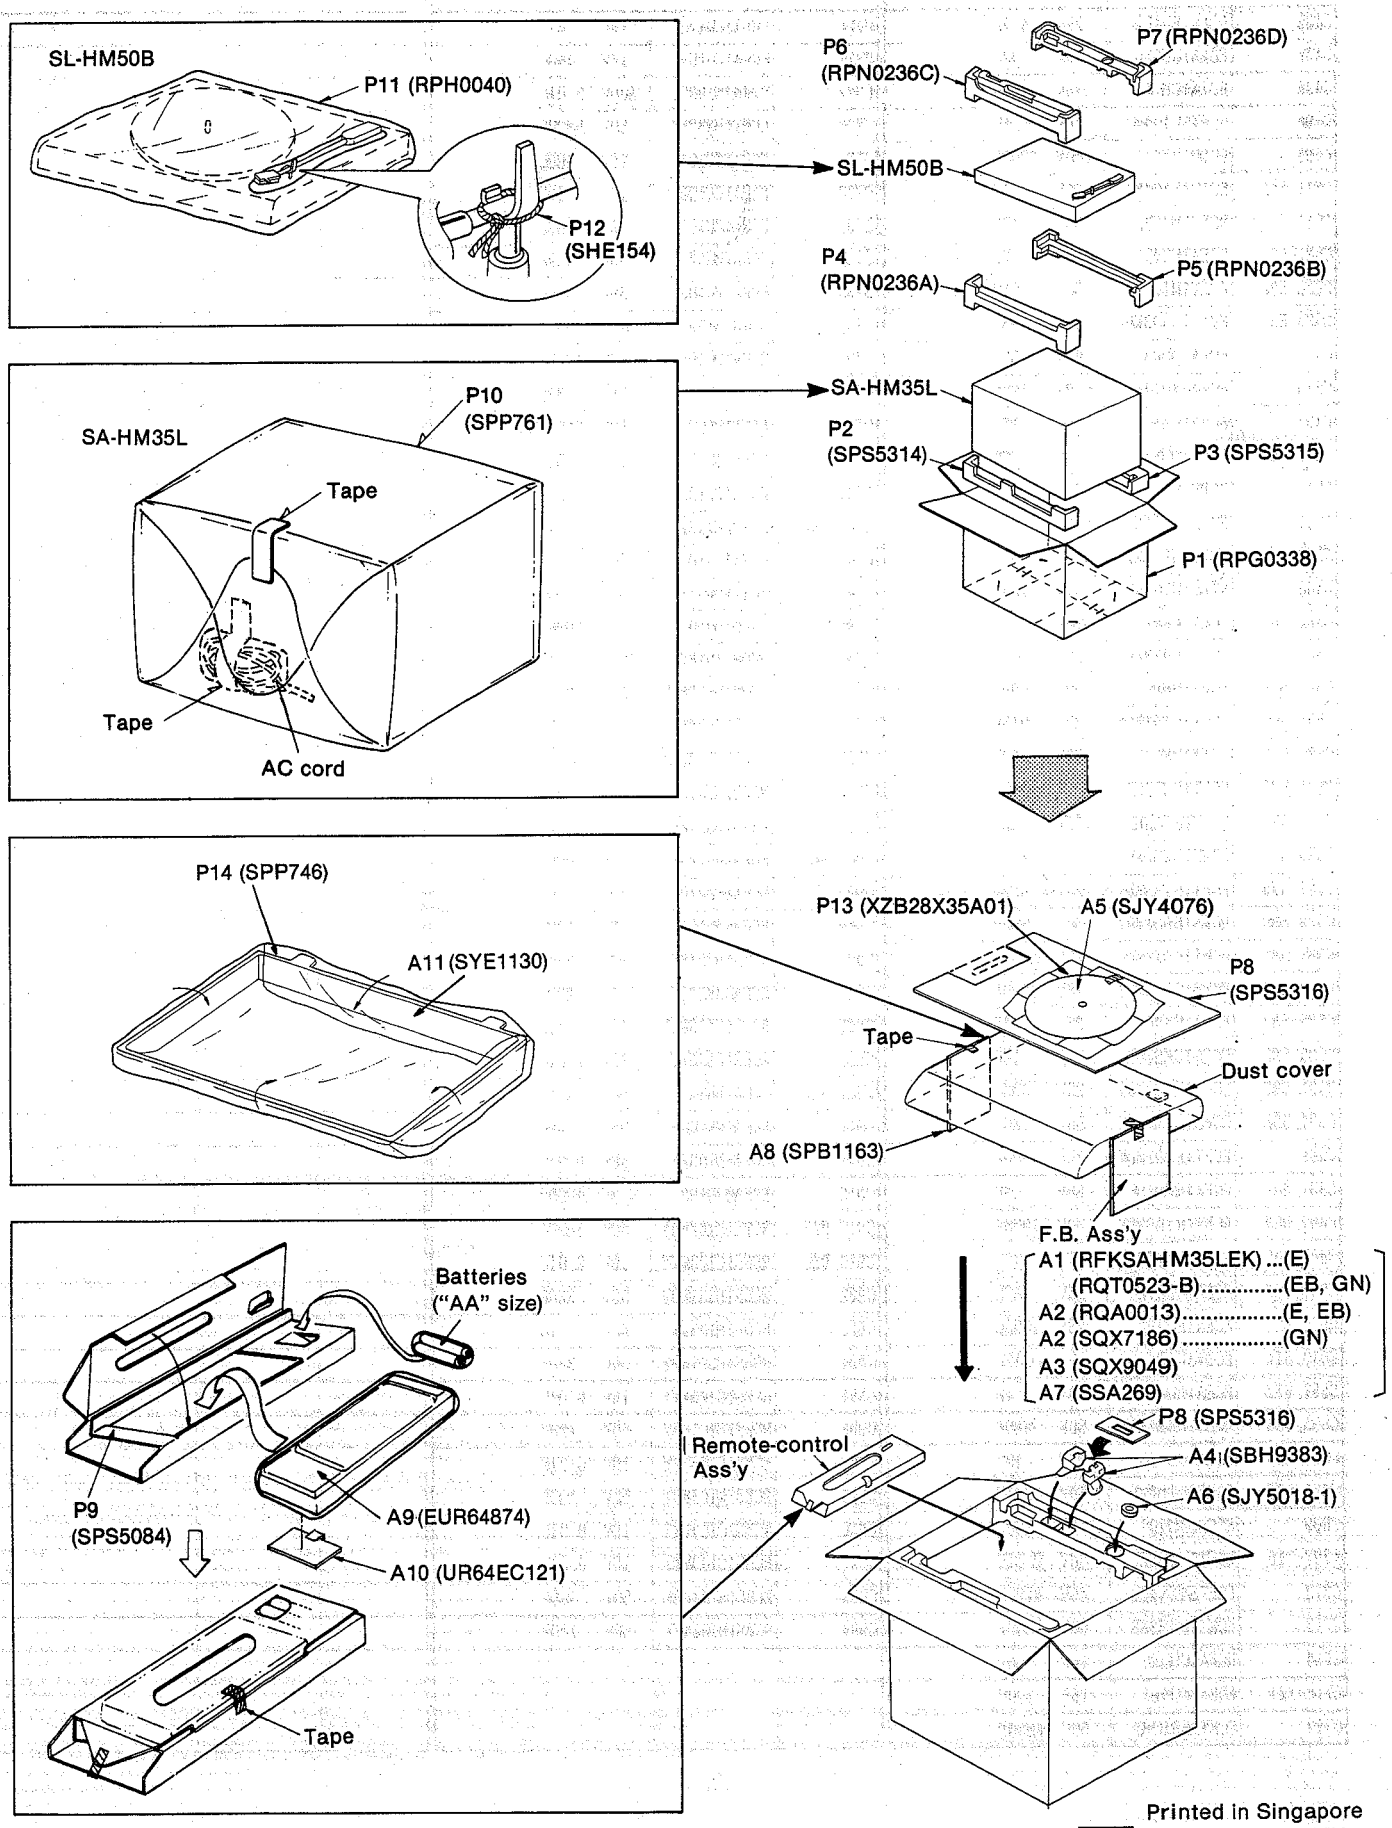

Printed in Singapore
MESA H900209000 YY/TN

ORDER NO. MD9409134P8

6703

Parts Change Notice

Model No. SA-HM35L E/EB/GN-K

Please revise the original parts list in the Service Manual to conform to the change(s) shown herein. If new part numbers are shown, be sure to use them when ordering parts.

Reason for Change	*The circled item indicates the reason. If no marking, see the Notes in the bottom column.
1. Improve performance	
2. Change of material or dimension	
3. To meet approved specification	
4. Standardization	
5. Addition	
6. Deletion	
⑦ Correction	
8. Other	

Interchangeability Code **The circled item indicates the interchangeability. If no marking, see the Notes in the bottom column.

	Parts		Set Production	
A	Original	→	Early	Original or new parts may be used in early or late production set.
	New	→	Late	Use original parts until exhausted, then stock new parts.
B	Original	→	Early	Original parts may be used in early production sets only. New parts may be used in early or late
	New	→	Late	production sets. Use original parts where possible, then stock new parts.
C	Original	→	Early	New parts only may be used in early or late production sets.
	New	→	Late	Stock new parts.
D	Original	→	Early	Original parts may be used in early production sets only. New parts may be used in late
	New	→	Late	production sets only. Stock both original and new parts.
Ⓔ Other				Error in Service Manual Parts List.

Part Number

Model No.	Ref. No.	Original Part No.	New Part No.	Notes(*,**)	Part Name & Descriptions	
CABINET AND CHASSIS						
	33	RFKLGHM30LAK	SGXGHM30L-E1	7, E	CASSETTE LID ASS'Y	[M]
	34	RFKLGHM30LBK	SGXGHM30L-E2	7, E	CASSETTE LID ASS'Y	[M]

[M] Indicates parts that are supplied by MESA.

File this Parts Change Notice together with your copy of the Service Manual for Model No. SA-HM35L E/EB/GN-K ORDER NO. : MD9002007C

Panasonic®

MESA Printed in Singapor
P940800360X